Some services and apps may not be available in all countries.
Please ask in-store for details.

Facebook is a trademark of Facebook, Inc.
The Twitter marks are trademarks of Twitter, Inc.
Google, Android, YouTube and other marks are trademarks of Google Inc.
Shazam is a trademark of Shazam Entertainment Limited.
The Expedia Airplane logo is a trademark of Expedia, Inc.

© 2012 Vodafone Group. VODAFONE and the VODAFONE logos are trade marks of Vodafone Group. Other product names mentioned herein may be the trade marks of their respective owners.

# User manual
# Vodafone Smart II

vodafone

Downloaded from www.Manualslib.com manuals search engine

# Notice

**Copyright © 2012 TCT Mobile Limited**

**All Rights Reserved**

Your phone is made exclusively for Vodafone by TCT.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of TCT.

**Trademarks**

VODAFONE, the Vodafone logos are trade marks of the Vodafone Group. Other product and company names mentioned herein may be trade marks of their respective owners.

TCT is a trademark of TCT.

The Bluetooth® word mark and logos are owned by Bluetooth® SIG, Inc. Bluetooth® QDID (Qualified Design ID): B019112

microSD™ is a trade mark of SD Card Association.



## Licences

microSD Logo is a trademark.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

### Vodafone Smart II
### Bluetooth QD ID B019112

The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.
Your device uses non-harmonised frequency and is intended for use in all European countries.

The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

Google, the Google logo, Android, the Android logo, Google Search, Google Maps, Gmail, YouTube, Google Play Shop, Google latitude and Google Talk are trademarks of Google Inc.

## Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Read the safety precautions and safety information carefully to ensure that you use this wireless device in a correct and safe manner.

TCT Mobile Limited Address:

TCT Mobile Europe SAS, 55 Av. des champs pierreux Le Capitole, Noyau B, 1er étage, 92000 Nanterre, France.

Website: http://www.vodafone.com/smart2



Downloaded from www.Manualslib.com manuals search engine

# Table of Contents


**1 Your phone ..... 6**
- 1.1 Keys and connectors ..... 6
- 1.2 Getting started ..... 8
- 1.3 Home screen ..... 13
- 1.4 Applications list ..... 22

**2 Text input ..... 24**
- 2.1 Using the onscreen keyboard ..... 24
- 2.2 Text editing ..... 25

**3 Phone calls, Call log and Contacts ..... 26**
- 3.1 Phone ..... 26
- 3.2 Call history ..... 30
- 3.3 Contacts ..... 31

**4 Google Messaging, Gmail/Email, Google Talk ..... 38**
- 4.1 Google Messaging ..... 38
- 4.2 Gmail/Email ..... 44
- 4.3 Google Talk ..... 49

**5 Google Calendar & Alarm clock & Calculator ..... 52**
- 5.1 Google Calendar ..... 52
- 5.2 Clock ..... 54
- 5.3 Calculator ..... 56

**6 Getting connected ..... 57**
- 6.1 Connecting to the Internet ..... 57
- 6.2 Browser ..... 60
- 6.3 Connecting to Bluetooth devices ..... 67
- 6.4 Connecting to a computer via USB ..... 68
- 6.5 Sharing your phone's mobile data connection ..... 69
- 6.6 Connecting to virtual private networks ..... 71





**7 Google Play Shop ..... 73**
- 7.1 Locate the item you want to download and install ..... 73
- 7.2 Download and install ..... 74
- 7.3 Manage your downloads ..... 76

**8 Multimedia applications ..... 78**
- 8.1 Camera/Camcorder ..... 78
- 8.2 Gallery ..... 81
- 8.3 YouTube ..... 83
- 8.4 Music ..... 84
- 8.5 Sound Recorder ..... 86
- 8.6 Videos ..... 87
- 8.7 FM Radio ..... 87

**9 Google Maps ..... 89**
- 9.1 Get My Location ..... 89
- 9.2 Search for a location ..... 90
- 9.3 Star a location ..... 91
- 9.4 Get driving, public transport or walking directions ..... 92
- 9.5 Arrangement of layers ..... 94
- 9.6 Join Latitude to see your friends' locations and share yours with them ..... 94

**10 Others ..... 98**
- 10.1 FileManager ..... 98
- 10.2 SyncML Client ..... 98
- 10.3 Torch ..... 99
- 10.4 Other applications ..... 99

**11 Settings ..... 100**
- 11.1 Wireless & networks ..... 100
- 11.2 Call settings ..... 102
- 11.3 Sound ..... 103
- 11.4 Display ..... 105




Downloaded from www.Manualslib.com manuals search engine

11.5 Location & security ..... 105
11.6 Applications ..... 107
11.7 Accounts & sync ..... 109
11.8 Privacy ..... 110
11.9 SD card & phone storage ..... 111
11.10 Language & keyboard ..... 112
11.11 Voice input & output ..... 115
11.12 Accessibility ..... 116
11.13 Date & time ..... 117
11.14 About phone ..... 118
**12 Making the most of your phone ..... 119**
12.1 FOTA Upgrade ..... 119
**13 Product Safety Information ..... 120**
**14 Telephone warranty ..... 129**
**15 Accessories ..... 131**
**16 Troubleshooting ..... 132**
**17 Specifications ..... 137**



# 1 Your phone

## 1.1 Keys and connectors

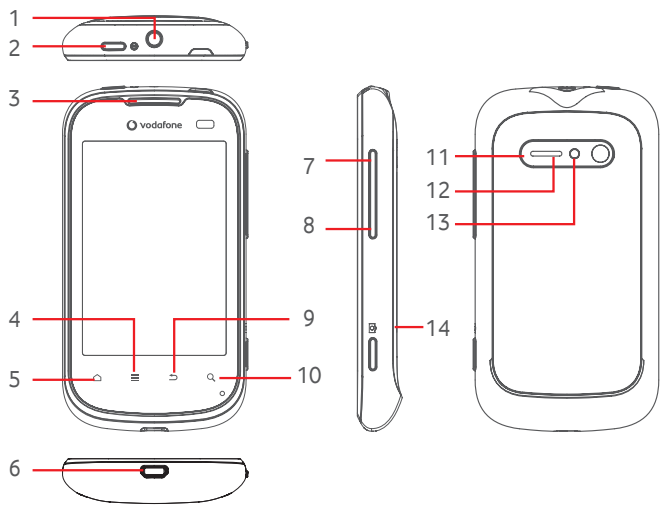


1 Headset connector
2 Power key
3 Loudspeaker
4 Menu key
5 Home key
6 Micro-USB connector
7 Volume up
8 Volume down
9 Back key
10 Search key
11 Loudspeaker
12 Flash
13 Camera
14 Camera key



Downloaded from www.Manualslib.com manuals search engine

**Power key**

- Short press: Wake the phone when in sleep mode
  Lock the screen.
  End a call when active.
- Long press: Turn the phone on
  Choose Silent mode, Airplane mode or Power off

**Home key**

- Short press: Return to the Home screen or back to the central Home screen if it is extended.
- Long press: Enter the recently used applications list.

**Menu key**

- On the Home screen, press to quickly access Settings menu or Notification panel; to launch quick search; to customise your Home screen by adding applications or changing wallpaper.
- On other screens, press to view options list.

**Back key**

- Go back to the previous menu or screen.

**Search key**

- Open Search bar for searching within an application, the phone or web.

**Volume Keys**

- Adjust the volume during a call, or when playing music or videos.
- Adjust the ring tone volume in general mode.



**Camera key**

- Long press: Start up the camera.
- Short press: take a photo or start/stop recording a video when on camera or video preview screen.

## 1.2 Getting started

### 1.2.1 Set up

**Removing or installing the back cover**

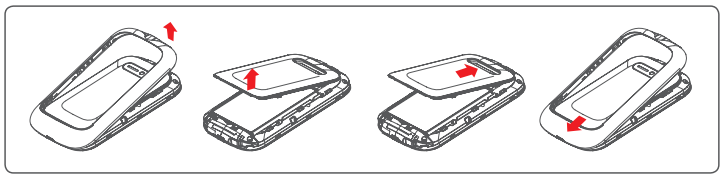

**Inserting or removing the SIM card** [1]

You must insert your SIM card to make phone calls. Please power off your phone and remove the battery before inserting or removing the SIM card.

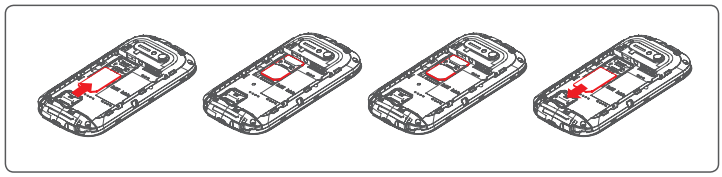

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

[1] Your SIM card must be 3V or 1.8V compatible. If your SIM card does not work, please contact Vodafone, as it may be an older 5V SIM.



Downloaded from www.Manualslib.com manuals search engine

### Installing and removing the microSD card

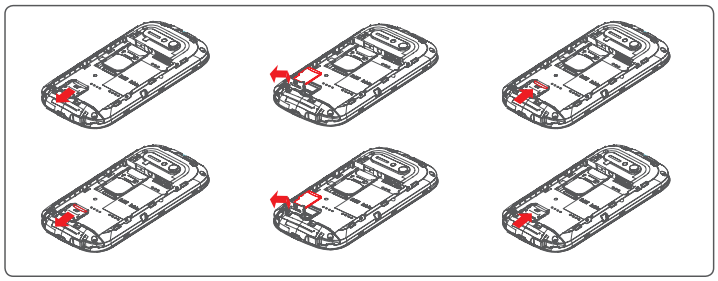

To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, fold down the microSD holder and slide it in the opposite direction to lock it.

### Installing or removing the battery

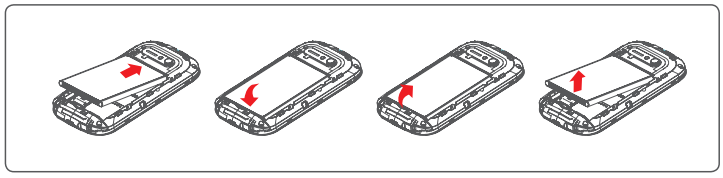

- To install, insert and click the battery into place, then close the phone cover.
- To remove the battery, first power the phone off. Then unclip the cover and remove the battery.



### Charging the battery

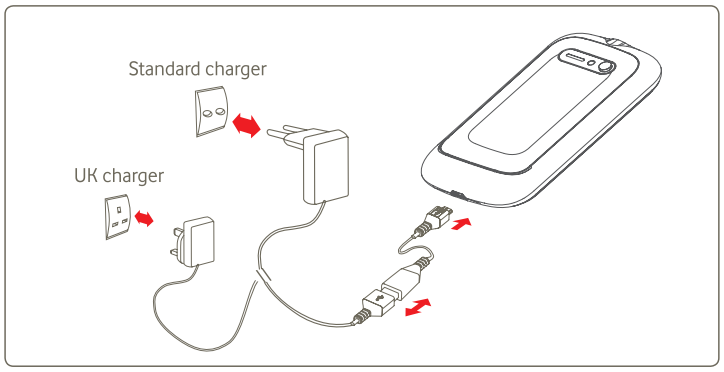


Connect the battery charger to your phone and mains socket respectively.

- The phone will be switched on when charging the battery.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 4 hours).

You are advised to fully charge the battery ( ). Charging status is indicated by a lightning icon and an increasing level of green in the battery symbol ( ) on the top icon bar.

To reduce power consumption and energy waste, when the battery is fully charged: disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.



Downloaded from www.Manualslib.com manuals search engine

### 1.2.2 Turn on your phone

Hold down the **Power** key until the phone powers on. It will take some seconds before the screen lights up.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your telephone. Store this information in a safe place when not in use.

**Set up your phone for the first time**

The first time you power on the phone, you are asked to touch the Android logo to begin. And then sign into your Google account to synchronise email, contacts, calendar and other Google applications [1].

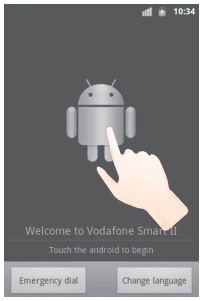


- **Select your Language:** Touch **Change language** to select the phone's language, then touch **Next**.
- Read the information on the screen, then touch **Next** or **Skip**.
- **Mobile Data Explained:** Mark/Unmark the check box to choose the **Data Enabled** or the **Data Roaming**, then touch **Next**.
- **Setup Wi-Fi:** Touch set Wi-Fi to add new Wi-Fi network. Touch **Skip** to enter next option, you could set it later at **Settings/Wireless & networks/Wi-Fi settings**.

[1] Application availability is dependent on the country you're based in.



- **Apps make life easier:** If you have a Google Account, touch **Setup Now/ Sign in**, then enter your user name and password. If you forget your password, you can go to http://www.google.com/ to retrieve it. If you don't own a Google Account, you are prompted to create one by touching **Create**. Touch **Skip** to enter next option.
- **Date & time:** To set up the date and time, then touch **Next**.
- **Manage contacts or set Security:** To manage your contacts or set your phone's security, then touch **Finish**.

You can always go to this initial setup again by touching **Applications tap/Setup Wizard**.

If you don't have a SIM card inserted you can still connect to a Wi-Fi network from the Power on screen, which will let you sign on to your Google account and use some features.

### 1.2.3 Power off your phone

Hold down the **Power** key from the Home screen until the **Phone options** appear, select **Power off**.



Downloaded from www.Manualslib.com manuals search engine

## 1.3 Home screen

You can bring all the things you use most frequently (applications, shortcuts, folders and widgets) to your Home screen for quick access. Press the **Home** key to switch to the Home screen.

**Status bar**
- Status/Notification indicators
- Touch & drag down to open the notification panel.

**Search bar**
- Touch a to enter Search options: All, Web, Apps, Contacts, etc.
- Touch b to enter text search screen.
- Touch c to enter voice search screen.

Touch an icon to open an application, folder, etc.

Touch to access **Browser**

**Applications tab**
- Touch to open main menu.
- Touch and hold to display thumbnails of all your Home screens.
- Touch to access the dial screen.
- Touch to access Call log if you have missed call(s).

The real Home screen depends on different districts and operators.

The Home screen also includes other screens on either side of it to allow for more space for adding applications, shortcuts, etc.

Touch the small dots on either side of the Applications tab to move to the next screen available. Touch & hold the dots to display thumbnails of the other screens, then touch a thumbnail to open it.

### 1.3.1 Using the touchscreen

**Touch**

To access an application, touch it with your finger.



**Touch & hold**

To enter the available options for an item, Touch & hold the item. For example: select a contact in Contacts, Touch & hold this contact, and an option list will then appear on screen.

**Drag**

Place your finger on the touchscreen to drag an object to another location.

**Slide/Swipe**

Slide the screen to scroll up and down the applications, images, web pages... You could slide the screen horizontally too.

**Flick**

Similar to swiping, but flicking makes it move quicker.

**Pinch/Spread**

Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

**Rotate**

Automatically change the screen orientation from portrait to landscape by turning the phone sideways.



Downloaded from www.Manualslib.com manuals search engine

### 1.3.2 Status bar

From the Status bar, you can view both phone status (to the right side) and notification information (to the left side). When the Status bar is full, " " icon will appear, touch to display hidden icons.

**Status icons**

| | | | |
|---|---|---|---|
| | GPRS connected | | GPS is on |
| | GPRS in use | | Receiving location data from GPS |
| | EDGE connected | | Speakerphone is on |
| | EDGE in use | | Roaming |
| | 3G connected | | No signal |
| | 3G in use | | No SIM card installed |
| | HSPA (3G+) connected | | Vibrate mode |
| | HSPA (3G+) in use | | Ringer is silenced |
| | Connected to a Wi-Fi network | | Phone microphone is mute |
| | Bluetooth is on | | Battery is very low |
| | Connected to a Bluetooth device | | Battery is low |
| | Airplane mode | | Battery is partially drained |
| | Alarm is set | | Battery is full |
| | Signal strength | | Battery is charging |
| | Car mode | | Headset connected |



**Notification icons**

| | | | |
|---|---|---|---|
| | New Gmail message | | More notifications are hidden |
| | New text or multimedia message | | Call in progress (green) |
| | Problem with text or multimedia message delivery | | Call in progress using Bluetooth headset (blue) |
| | New Google Talk message | | Missed call |
| | New voicemail | | Call on hold |
| | Upcoming event | | Call forwarding is on |
| | Data is synchronizing | | Uploading data |
| | Problem with sign-in or synchronisation | | Downloading data |
| | microSD card is full | | Download finished |
| | No microSD card installed | | An open Wi-Fi network is available |
| | Connected to VPN | | Phone is connected via USB cable |
| | Disconnected from VPN | | Radio is on |
| | Song is playing | | System update available |
| | USB tethering is on | | Portable Wi-Fi hotspot is on |
| | Both USB tethering and portable hotspot are on | | |



Downloaded from www.Manualslib.com manuals search engine

**Notification panel**

To open the notification panel, touch & drag down from the Status bar or press the **Menu** key and touch **Notifications**. Touch & drag up to close it. From the Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

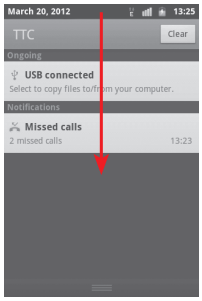


Touch Clear to clear all event–based notifications (other ongoing notifications will remain).

## 1.3.3 Search bar

The phone provides a Search function which can be used to locate information within applications, the phone or the web.

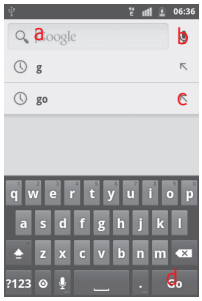




a Touch or press the keypads to search by text

b Touch to search by voice

c Touch to enter the suggested text for quick search

d Touch to search the web

**Search by text**

- Touch Search bar or press the **Menu** key then touch **Search** from the Home screen, or press **Search** key from other applications screen.
- Enter the text/phrase you want to search for.
- Touch Go if you want to search on the web.

**Search by voice**

- Touch from Search bar to display a dialog screen.
- Speak the word/phrase you want to search for. A list of search results will display for you to select from.

## 1.3.4 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by creating a variety of patterns, PIN or password.

**To create a screen unlock pattern** (refer to section "**11.5.2 Screen unlock/ Set up screen lock**" for detail settings)

- Press **Menu** key from the Home screen, touch **Settings**, then touch **Location & security/Set up screen lock/Pattern**.
- Draw your own pattern, you can also press **Menu** key for help.



Downloaded from www.Manualslib.com manuals search engine

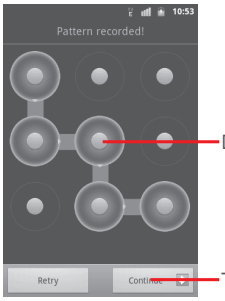


Draw your unlock pattern

Touch to confirm by drawing pattern again

**To create a screen unlock PIN/Password**

- Press **Menu** key from the Home screen, touch **Settings**, then touch **Location & security/Set up screen lock/PIN** or **Password.**
- Set your PIN or password.

**To lock phone screen**

Press the **Power** key once to lock the screen.

**To unlock phone screen**

Draw the unlock pattern you have created or enter PIN or password to wake up the screen. If you did not set the unlock screen, drag right the lock icon to unlock it.

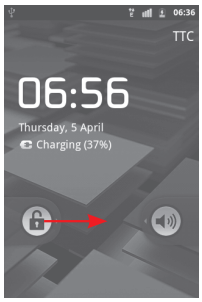




### 1.3.5 Personalise your home screen

**Add**

You can add shortcuts, widgets or folders to the Home screen by touching & holding an empty area, or pressing the **Menu** key, and touching **Add**. The **Add to Home screen** will appear, offering a range of options.

- **Shortcuts** To add a shortcut to the Home screen, such as applications, bookmark, contact, etc.
- **Widgets** To add a widget to the Home screen, such as clock, calendar, etc.
- **Folders** To add a folder to the Home screen, such as new folder, contact folder, etc.

To improve the organization of the Home screen items (shortcuts, widgets), you can add them to a folder by touching and dragging them onto the folder of your choice. To rename a folder, open it, Touch & hold the folder's title bar to open the Rename folder dialog box, then enter the new folder name and confirm with **OK**.

**Reposition**

Touch & hold the item to be repositioned to activate the Move mode, then drag it to the place you want and release it. Hold the icon on the left or right edge of the screen to drag the item to another Home screen page.

**Remove**

Touch & hold the item to be removed to activate the Move mode. Drag the item to the top of the Applications tab, which will then turn red, and release.



Downloaded from www.Manualslib.com manuals search engine

**Wallpaper customisation**

Touch & hold an empty area or press **Menu** key and touch **Wallpaper** on the Home screen, a popup window named **Select wallpaper from** will appear, offering a range of options. **Gallery** includes pictures you have taken, cropped or downloaded. **Live wallpaper** include a scrolling list of animated wallpapers. **Wallpapers** includes all preset wallpapers in the phone. Slide left and right to locate a desired image, touch **Set wallpaper** to confirm.

### 1.3.6 Applications tab

Touch on the Home screen to enter applications list.

To return to the Home screen, press the **Home** key.

**Consult recently-used applications**

To consult recently-used applications, you can press and hold the **Home** key from the Home screen. Touch an icon in the window to open the related application.

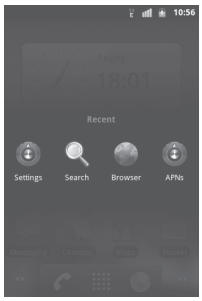




### 1.3.7 Volume adjustment

**Using volume key**

Press **Volume up/down** key to adjust the volume. While in the lowest volume level, your phone will now be switched to Silent mode or Vibrate mode [1].

**Using Settings menu**

Press **Menu** key from the Home screen, then touch **Settings/Sound**, you can set ringer, media and phone ringtone volume to your preference.

**Sound on/off**

When the screen is locked, drag left the icon to switch sound off, drag right the icon or to switch sound on [1].

## 1.4 Applications list

The Applications list contains all pre-embedded and newly installed applications.

To access the Applications list, touch from the Home screens. To return to the Home screens, press the **Home** key.

### 1.4.1 Normal mode and sort mode

Applications can be managed in two modes. To switch between the two modes, press **Menu** key from applications list screen, and touch **Switch view**.

- **Normal mode (default)** All applications are listed in alphabetical order.
- **Sort mode** All applications are sorted by several categories.

[1] The phone setting will vary depending on the changes made to the default settings in **Settings/Sound/Phone vibrate**.



Downloaded from www.Manualslib.com manuals search engine

### 1.4.2 Managing Categories

There are 8 categories in total: 5 categories are predefined, and you can add 3 more.

Press the **Menu** key, and select **Edit** to enter edit mode. Within edit mode you can now customise categories.

- **Rename Category** — Locate the category you want to rename, touch to display options menu, then touch **Rename Category**. When finished, touch **OK**.
- **Remove Category** — Locate the category you want to remove, touch to display options menu, then touch **Remove Category**.
- **Add a category** — Press the **Menu** key, then touch **Add Category** to create a new category name. When finished, touch **OK**. You can select some applications to move into the new category, and confirm by touching **OK** again.
- **Move an application among categories** — Locate the application you want to move, touch to display the categories list, then touch the desired category name.



# 2 Text input

## 2.1 Using the onscreen keyboard

An onscreen keyboard will display automatically when a program requires you to text or numbers.

#### Onscreen keyboard settings

Press the **Menu** key from the Home screen, then select **Settings/Language & keyboard/Swype** (or **Android keyboard**) to see the various keyboard settings. Scroll to select the keyboard style you want to change.

#### Change the onscreen keyboard orientation

Turn the phone sideways or upright to change the onscreen keyboard orientation. You can also change it in the keyboard settings (press the **Menu** key in the Home screen, then **Settings/Display/Quto-rotate screen**).

### 2.1.1 Standard Android keyboard

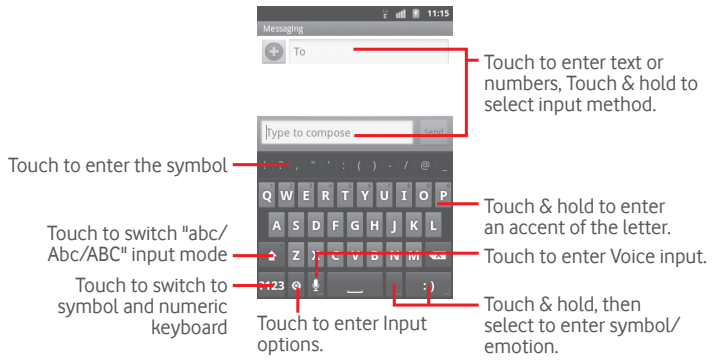




Downloaded from www.Manualslib.com manuals search engine

### 2.1.2 Swype keyboard

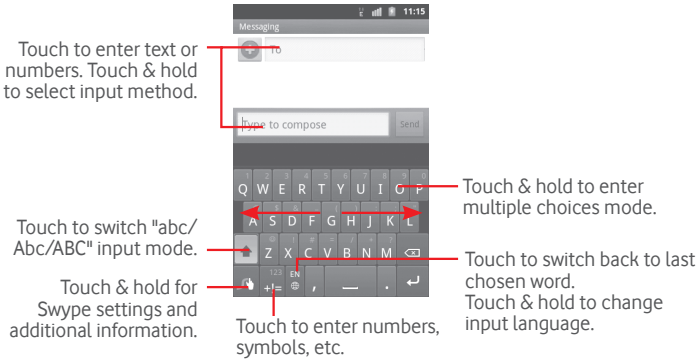


## 2.2 Text editing

You can edit the text you have entered.

- Touch & hold text you have entered
- An options list pops up
- Select the operation you need (**Select all**, **Select text**, **Cut all**, **Copy all**, etc.)



# 3 Phone calls, Call log and Contacts

## 3.1 Phone .....

### 3.1.1 Making a call

To quickly open the **Phone** application:

- Touch from the Home screen.
- Touch the Applications tab from the Home screen and select **Phone.**

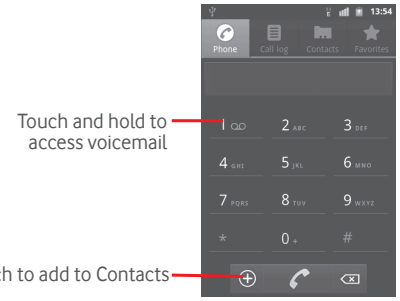


Enter the number you want using the keyboard, or select a contact from **Contacts**, **Call log** or **Favourites** by touching the upper tabs, then touch to place the call.

The number you entered can be saved to **Contacts** by touching or pressing the **Menu** key and touching **Add to Contacts.**

Press the **Menu** key to add 2-sec pause or wait.

If you make a mistake, you can delete the incorrect digits by touching .

To hang up a call, touch **End** or **Power** key when the **Settings/Accessibility/ Power button ends call** option is activated.



Downloaded from www.Manualslib.com manuals search engine

**International call**

To dial an international call, Touch & hold 0 + enter "+", then enter the international country prefix followed by the full phone number and finally touch .

**Emergency call**

If your phone has network coverage, dial emergency number and touch to make an emergency call. This works even without a SIM card and without typing the PIN code.

### 3.1.2 Answering or rejecting a call

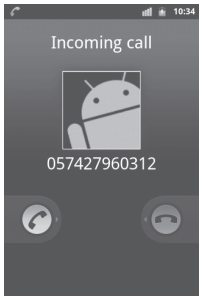


When you receive an incoming call, drag the green phone icon over to the right to answer.

When you receive an incoming call, but don't want to answer, you may decline it by dragging the red phone icon over to the left. The caller is sent directly to your voicemail box to leave a message.

To mute the ringtone volume of an incoming call, press the **Volume up/down** key.



### 3.1.3 Calling your voicemail

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time.

To access your voicemail, Touch & hold 1 on **Phone** tab.

To set your voicemail number, enter **Settings/Call settings/Voicemail settings**.

If you receive a voicemail, a voicemail icon appears on the Status bar. Open the Notification panel, touch **New voicemail**.

### 3.1.4 During a call

To adjust the volume during a call, press the **Volume up/down** key.

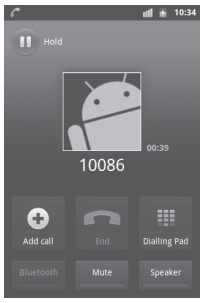




Downloaded from www.Manualslib.com manuals search engine

Touch to hold the current call. Touch this icon again to retrieve the call.




Touch to display Dialpad.

Touch to end the current call.

Touch to switch between bluetooth headset and phone.

Touch to mute the current call. Touch this icon again to unmute the call.

Touch to activate the speaker during the current call. Touch this icon again to deactivate the speaker.

To avoid misoperation on touchscreen during a call, screen will be locked automatically when the user put the phone close to his/her ear, and it will be unlocked when put the phone away.

### 3.1.5 Managing multiple calls

With this phone you can handle multiple calls at the same time.

**Swap calls**

When you accept two calls, touch icon , you can now switch between two lines. The current call is put on hold and you have joined in the other call. Press the **Menu** key to display options list.



**Conference calls** [1]

You can set up a conference call.

- Place a call to the first participant of the conference call.
- Touch icon

.
- Enter the phone number of the person you want to add to conference and touch icon . You can also add participants from **Contacts**, **Call log** or **Favourites**.
- Touch icon

to start conference call.
- During a conference call, touch

to drop a participant or to talk privately to one of the participants. Touch to drop the participant from the conference, touch to talk privately to the participant and hold on other participants.
- Touch

to end the conference call and disconnect all callers.

## 3.2 Call history

You can access your call history by touching from the Home screen and touching **Call log**. Touch on the right side of contact/number to place a call directly. There are three kinds of calls in Call log:

Missed calls

Outgoing calls

Incoming calls

Touch or touch & hold a contact or number to view information or further operations.

[1] Depending on your network operator.



Downloaded from www.Manualslib.com manuals search engine

You can view detailed information of a call, launch a new call or send messages to a contact or number, or add numbers to **Contacts** (only available for phone numbers), etc.

To clear the entire call memory, press the **Menu** key then touch **Clear call log**.

## 3.3 Contacts

**Contacts** enables quick and easy access to the people you want to reach.

You can view and create contacts on your phone and synchronize these with your Gmail contacts or other applications on the web or on your phone.

When using Contacts for the first time you will be asked to add new contacts, import contacts from SIM card (please refer to "**3.3.5 Contacts importing, exporting and sharing**" for detailed information), or synchronize contacts from other application accounts to your phone.

### 3.3.1 Consult your Contacts

To access the **Contacts**, touch the Applications tab on the Home screen, then select **Contacts**.

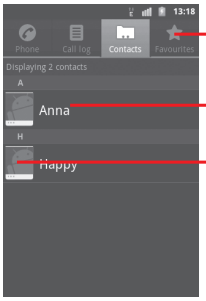


Touch to view your favourite contacts.

Touch to view the contact's detailed information.

Touch icon to open Quick Contact panel.

Touch & hold a contact to display its option menu.

You can also press the **Menu** key to display contacts list option menu.



Following actions are enabled:

- **New contact** Add new contacts to the phone.
- **SIM contacts** Manage contacts stored in SIM card.
- **Display options** Choose contacts to display, for example only contacts with phones, other application contacts if any, etc.
- **Accounts** Manage the synchronization settings for different accounts.
- **Import/Export** Import or export contacts between phone, SIM card, and microSD card.
- **More/Sync** Launch synchronization with the account you set.
- **More/Delete** Select and delete unwanted contacts.

### 3.3.2 Adding a contact

Press the **Menu** key from contacts list screen and touch **New contact.**

You are required to enter the contact's name and other contact information. By scrolling up and down the screen, you can move from one field to another easily.

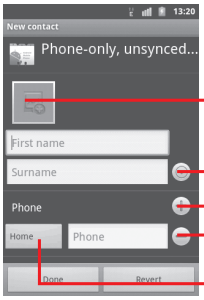


Touch to select a picture for the contact.

Touch to unfold the other predefined labels of this category.

Touch to add other new labels to this category.

Touch to delete the selected label.

Touch to open a menu with preset labels.

When finished, touch **Done** to save.



Downloaded from www.Manualslib.com manuals search engine

**Add to/remove from Favourites**

To add a contact to Favourites, Touch & hold a contact to display the contact's option menu, then touch **Add to Favourites**. Or you can also touch a contact to view details then touch ☆ to add the contact to Favourites (the star will turn gold in color).

To remove a contact from Favourites, select **Remove from Favourites** on the contact's option menu or touch the gold star ★ on contact details screen.

### 3.3.3 Editing your contacts

To edit contact information, Touch & hold the contact whose information is to be edited, then touch **Edit contact**. When finished, touch **Done**.

**Change a contact's default phone number**

The default phone number (the number which has priority when making a call or sending a message) will always be displayed under the contact name. To change the default phone number, Touch & hold the number you want to set as the default number from the contact's details screen, then select **Make default number**. A √ appears after the number.

**Divert calls to voicemail/Set ringtone for a contact**

On the contact's detail screen, press the **Menu** key to display contacts list options menu, touch **Options**, then select **Incoming calls** or **Ringtone**.

When one contact has been set to send calls directly to voicemail, if he/she calls, your phone will not ring and the caller will be sent directly to your voicemail.

**Delete a contact**

To delete a contact, press the **Menu** key and touch **Delete contact** from contact details screen or directly touch & hold a contact from Contacts screen to display contacts list option menu then touch **Delete contact**. Touch **OK** to confirm.



The contact you have deleted will also be removed from other applications on the phone or web the next time you synchronize your phone.

### 3.3.4 Communicating with your contacts

From the contacts list, you can communicate with your contacts by making a call or exchanging messages.

To launch a call to a contact, locate the contact or number you want to call, then touch . You can also touch & hold the contact or number, then touch **Call contact**.

To send a message to a contact, touch & hold the contact or number you want to send a message to, then touch **Text contact**. You can also touch on the right side of the contact from contact details screen.

**Use Quick Contact for Android**

Touch a contact's picture to open Quick Contact for Android, then you can touch the icon for the way you want to connect.

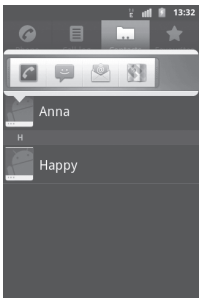


The icons available on Quick Contact bar depend on the information you have for the contact and the applications and accounts on your phone.



Downloaded from www.Manualslib.com manuals search engine

### 3.3.5 Contacts importing, exporting and sharing

This phone enables you to import contacts from SIM card/microSD card and export contacts to a microSD card which can then be used to back up your information.

From the Contacts screen, press the **Menu** key to open options menu, touch **Import/Export**, then select **Import from SIM card**, **Export to SIM card**, **Import from SD card, Export to SD card** or **Share visible contacts**.

To import/export a single contact from/to SIM card, touch the contact you want to import/export, then touch **OK** to confirm.

To import/export all contacts from/to your SIM card, mark the **Select all** check box, then touch **OK** to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, MMS, Gmail, etc.

Touch a contact you want to share, press the **Menu** key and touch **Share** from contact details screen, then select the way you want to share it.

### 3.3.6 Displaying contacts

You can configure which group of contacts, for each account, you want to display in the Contacts list. To hide/display contacts that don't have phone numbers, press the **Menu** key from contacts list screen, touch **Display options**, then activate or deactivate **Only contacts with phones** by touching it. Finally, touch **Done** to save. The same operation for other two options: **Sort list by**, **View contact names as**.

### 3.3.7 Joining/Separating contacts

To avoid duplication, you can add any new contact information to existing contacts in a single action.

Touch the contact which you want to add information to, press the **Menu** key and touch **Edit contact**, then press the **Menu** key again and touch **Join**.



At this time, you are required to select the contact whose information you want to join with the first contact. The information from the second contact is added to the first one, and the second contact will no longer be displayed in the Contacts list.

To separate contact information, touch the contact whose information you want to separate, press the **Menu** key and touch **Edit contact**, then press the **Menu** key again and touch **Separate**, touch **OK** to confirm.

### 3.3.8 Accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your phone.

To add an account, press the **Menu** key from Contacts list, touch **Accounts**, then touch **Add account** tab; or access it by pressing **Menu** key from the Home screen, then touch **Settings/Accounts & sync/Add account**.

You are required to select the kind of accounts to add, like Google, Corporate, etc.

As with other account set ups, you need to enter detailed information, like username, password, etc.

You can remove an account to delete it and all associated information from the phone.

Open the **Accounts & sync settings** screen, touch the account you want to delete, then touch **Remove account** and confirm.

Useful icons:

Indicates that the account is configured to synchronize automatically with your phone.

Indicates that the account is not configured to synchronize automatically with your phone.



Downloaded from www.Manualslib.com manuals search engine

### Background data

Activate or deactivate **Background data** to control whether applications or services data can be transmitted when they are running in the background. Applications can synchronize, send, and receive data at any time if activated.

For example, if deactivated, Gmail will stop receiving new emails until you touch the **Refresh** or send an email.

### Auto-sync

When activated, all changes to information on the phone or online will be automatically synchronized to each other.

### Sync manually

You can synchronize an account manually on **Accounts & sync settings** screen, and you must touch an account in the list on this screen, press the **Menu** key and touch **Sync now**.



# 4 Google Messaging, Gmail/ Email, Google Talk

## 4.1 Google Messaging

You can create, edit and receive SMS and MMS messages with your phone.

To start, touch the Applications tab from the Home screen, then select **Messaging**.

All messages you receive or send out can only be saved in phone memory. To view older messages stored on your SIM card, press the **Menu** key in the **Messaging** screen, then touch **Settings/Manage SIM card messages.**

### 4.1.1 Write a message

In the message list screen, touch **New message** to write text/multimedia messages.

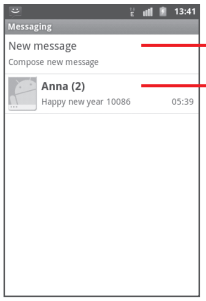




Downloaded from www.Manualslib.com manuals search engine

### Sending a text message

Enter the mobile phone number of the recipient in the **To** bar or touch to add numbers from your Contacts, then touch the **Type to compose** bar to enter the text of the message. When finished, touch **Send** to send the text message.

An SMS message of more than 160 characters will be charged as several SMS. When the total number of characters you have entered is approaching the 160-character limit, a counter will appear on the lower right corner below Send option of the text box to remind you how many characters are allowed to be entered in one message.

Specific letters (accent) will increase the size of the SMS, which may cause multiple SMS to be sent to your recipient.

### Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and sounds to other compatible mobiles and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or subject or email addresses are added.

To send a multimedia message, enter the recipient's phone number in the **To** bar, touch **Type to compose** bar to enter the text of the message. Press the **Menu** key to open the option menu, touch **Add subject** to insert a subject, and touch **Attach** to attach picture, video, audio or slide.

When finished, touch **Send MMS** to send the multimedia message.



**Attach options:**

- **Pictures** — Access Gallery application or File manager to select a picture as attachment.
- **Capture picture** — Access Camera to capture a new picture for attaching.
- **Videos** — Access Gallery application or File manager to select a video as attachment.
- **Capture video** — Access Camcorder to record a new video for attaching.
- **Audio** — Access to select an audio file as attachment.
- **Record audio** — Enter voice message recorder to record a voice message for attaching.
- **Contact** — Access Contacts to attach a vCard of a contact.
- **Appointments** — Access Calendar to attach an appointment.
- **Slideshow** — Enter Edit slide show screen, touch **Add slide** to create a new slide, and touch currently existing slide to edit it (see following picture). Press the **Menu** key to get more actions, like setting the slide duration, adding music, etc.

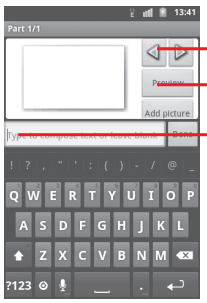




Downloaded from www.Manualslib.com manuals search engine

### 4.1.2 Manage messages

When receiving a message, an icon will appear on status bar as notification. Drag down the status bar to open the Notification panel, touch the new message to open and read it. You can also access the Messaging application and touch the message to open.

Messages are displayed in conversational order.

To reply to a message, touch the current message to enter message-composing screen, enter the text, then touch **Send**.

To return to the message list from a text message thread, press the **Menu** key and then touch **More/All threads**.

Touch & hold a message in message details screen. The following message options are available for selection:

- **Lock/Unlock message** Touch to lock/unlock the message so it can/can't be deleted if you reach maximum number of stored messages.
- **Call XXX** Touch to call the message sender.
- **Add XXX to Contacts** [1] Touch to save the number to Contacts.
- **Forward** Touch to forward the message to another recipient.
- **Copy message text** * This option displays when the message is an SMS. Copy the current message content. You can paste it to the enter bar of the new message you are going to compose.
- **View message details** Touch to view details of the message.
- **Delete message** Delete the current message.
- **Save to template** Save the current message to Message template.

[1] Option will not appear unless the number is not saved in the Contacts.



### 4.1.3 Adjust message settings

You can adjust a set of message settings. From Messaging application screen, press the **Menu** key and touch **Settings**.

**Storage settings**

- **Delete old messages** Select to delete old messages when the maximum number of stored messages is reached.
- **Text-message limit** Touch to set the number of text messages to be saved per conversation.
- **Multimedia message limit** Touch to set the number of multimedia messages to be saved per conversation.
- **Service Center** Touch to view the service center number.

**Text message (SMS) settings**

- **Delivery reports** Select to request a delivery report for each text message you send.
- **Manage SIM card messages** Touch to manage text messages stored on your SIM card.
- **Character optimization** Mark to use the similar ASCII character.



Downloaded from www.Manualslib.com manuals search engine

**Multimedia message (MMS) settings**

- **Delivery reports** Select to request a delivery report for each multimedia message you send.
- **Read reports** Select to request a report on whether each recipient has read a multimedia message sent by you.
- **Auto-retrieve** Select to download the full MMS message (including message body and attachment) automatically to your phone. Otherwise, download only the MMS message header.
- **Roaming auto-retrieve** Select to download the full MMS message (including message body and attachment) automatically when roaming. Otherwise, download only the MMS message header to avoid extra charges.
- **Maximum message size** Touch to set maximum message size.
- **Creation mode** Touch to set MMS creation mode when composing message.
- **MMS Priority** Touch to set MMS priority.

**Notification settings**

- **Notifications** Select to display message notifications in status bar.
- **Select ringtone** Touch to select a ringtone as a new message notification tone.
- **Vibrate** Select to have phone vibrate as a notification when receiving a new message.



## 4.2 Gmail/Email

The first time you set up your phone, you can select to use an existing Gmail or to create a new Email account.

### 4.2.1 Gmail

As Google's web based email service, Gmail is configured when you first set up your phone. Gmail on your phone can be automatically synchronized with your Gmail account on the web. Unlike other kinds of email account, each message and its replies in Gmail are grouped in your inbox as a single conversation; all emails are organized by labels instead of folders.

**To access Gmail**

From the Home screen, touch the Applications tab to enter the applications list, then touch **Gmail**.

Gmail displays messages and conversations from one single Gmail account at a time, if you own more than one account, you can switch to another by pressing **Menu** key from Inbox screen, touching **Accounts**, then touching the account you want to view.

**To create and send emails**

- Press the **Menu** key from Inbox screen, and touch **Compose**.
- Enter recipient(s)'s email address in **To** field, and if necessary, press the **Menu** key and touch **Add Cc/Bcc** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Press the **Menu** key, touch **Attach** to send an attachment to the receiver.
- Finally, touch or press the **Menu** key then **Send**.
- If you do not want to send the mail out right away, you can touch **Menu** key then **Save draft** to save copy. To view the draft, press the **Menu** key from Inbox screen and touch **Go to labels**, then select **Drafts**.



Downloaded from www.Manualslib.com manuals search engine

- If you do not want to send or save the mail, you can press the **Menu** key then touch **Discard**.

To add a signature to emails, press the **Menu** key from inbox screen, and touch **More/Settings**, then touch an account to set **Signature**.

**To receive and read your emails**

When a new email arrives, you will be notified by a ringtone or vibration, and an icon will appear on Status bar.

Touch and drag down the Status bar to display the Notification panel, touch the new email to view it. Or you can also access the Gmail Inbox label and touch the new mail to read it.

If you want to go back to the Inbox label while reading a new message, you can press the **Back** key or press the **Menu** key and touch **Go to inbox**.

You can search for an email by sender, subject, label, etc.

- from inbox screen, press the **Menu** key and then touch **Search**
- enter the keyword you want to search for in the searching box and touch search icon.

**To reply or forward emails**

When viewing an email, you will see three icons offering further options at the centre of the conversation.

- **Reply/Reply all** Touch to enter text-inputting mode, enter the message you want to reply, then touch **Send** to send this message to one single recipient or all people in a mail loop.
- **Forward** Touch to forward the message to another person. You are required to enter the new recipient's email address and then touch **Send**.



**Managing Gmails by Labels**

To conveniently manage conversations and messages, you can organize them using a label.

To label a conversation when reading a conversation's messages, press the **Menu** key, touch **Change labels** and select the label to assign to the conversation.

To view conversations by labels when viewing your inbox or another conversation list, press the **Menu** key and touch **Go to labels**. Touch a label to view a list of conversations with that label.

**Touch & hold an email to produce the following options:**

- **Read** To read the selected email.
- **Archive** To archive the email message. To display the archived messages, you can press the **Menu** key in inbox screen and touch **View labels**, then **All mail**.
- **Mute** To mute the entire conversation. When muted, new mails related to this conversation will not be displayed in **Inbox**, but archived.
- **Mark read/Mark unread** To mark an email message as read or unread.
- **Delete** To delete the email message.
- **Add star/Remove star** To assign a star or remove the star from the conversation.
- **Change labels** To add or change the label of the email message or conversation.
- **Report spam** To report the email message/conversation as spam.



Downloaded from www.Manualslib.com manuals search engine

**Gmail settings**

To manage Gmail settings, press **Menu** key in Inbox screen and touch **More/ Settings**,

**General preferences**

- **Message Actions** Touch to select
- **Clear search history** Touch to remove the search history.
- **Clear "Show pictures"** Touch to remove the show pictures.

**Touch an account to set:**

- **Signature** To add a signature text to the end of each mail you send.
- **Confirm actions** Select to activate a query when deleting a message or conversation for double confirmation.
- **Reply all** Touch to mark the check box to make the default responding to messages.
- **Auto-advance** Touch to select which screen to show after you delete or archive a conversation.
- **Message text size** Touch to select the gmail text size.
- **Batch operations** Select to add a conversation to a batch for further operation, like archive, delete, change label, etc.
- **Sync inboxes and labels** Touch to open the Label screen, where you can manage conversation synchronization.
- **Email notifications** Select to activate notification when a new email arrives.
- **Labels to notify** Touch to set the notification preferences for synced labels.



### 4.2.2 Email

Besides your Gmail account, you can also set up external POP3 or IMAP email accounts on your phone.

To access your email, touch the Applications tab from the Home screen, then select **Email**.

An email wizard will guide you through the steps to set up an email account.

- Enter the email address and password of the account you want to set up.
- Touch **Next**. If the account you entered is not provided by a service provider shown on the phone, you will be prompted to go to the email account settings screen to enter settings manually.
- Enter the account name and display name in outgoing emails.
- Touch **Done**.
- To add another email account, you can press **Menu** key and touch **Add account** to create.

**To create and send emails**

- In the Inbox screen, press the **Menu** key, then touch **Compose**.
- Enter recipient(s)'s email address in **To** field, and if necessary, press the **Menu** key and touch **Add Cc/Bcc** to add a copy or a blind copy to the message.
- Enter the subject and the content of the message.
- Press the **Menu** key, touch **Add attachment** to send an attachment to the receiver.
- Finally, touch **Send**.
- If you do not want to send the mail right away, you can touch **Save as draft** or press the **Back** key to save a copy.



Downloaded from www.Manualslib.com manuals search engine

## 4.3 Google Talk

Google's instant messaging service, Google Talk, lets you communicate with your friends whenever they are connected to this service.

To access this feature and sign in, touch the Applications tab from the Home screen, then touch **Talk**. All friends added by using Google Talk from the web or phone will be displayed in your friends list.

Touch your account to enter set your status screen:

- Touch to set your online status.
- Touch the text box to enter your status message.
- Touch **Done** to save.

To sign out, press the **Menu** key from Friends list to display options, then touch **Sign out**.

### 4.3.1 Chatting with your friends

To start a chat, touch the name of a friend in your Friends list, then enter your message and finally touch **Send**.

You can invite other friends to join in a group chat by pressing **Menu** key, touching **Add to chat** and then selecting the friend you want to add.

When chatting with more than one friend, you can switch screens by pressing **Menu** key, then touching **Switch chats**.

To return to Friends list screen, press the **Menu** key, then touch **Friends list**.

### 4.3.2 To add a new friend

From Friends list, press the **Menu** key to open options list and touch **Add Friend** to add a new friend. Enter the Google Talk ID or Gmail address of the friend you want to add, and then touch **Send invitation**.



A notification with this invitation will be received by the friend. By touching the invitation, the friend can select **Accept** or **Cancel** in response.

You can also check all invitations you have sent or received by pressing **Menu** key from Friends list and touching **More/Invites**.

### 4.3.3 To close a chat

When you want to end a chat, the following two ways are available:

- From Friends list screen, Touch & hold the friend you want to stop chatting with to open Option menu, and then touch **End chat**.
- Press the **Menu** key from chatting screen directly, and then touch **End chat**.

### 4.3.4 To manage your friends

Besides adding new friends to your friends list, the following actions are available for your choice:

- **To view all friends/ most popular friends** — By default, only friends that you frequently communicate with are displayed in Friends list. To view all friends, press the **Menu** key, then touch **All friends**. To return to displaying most popular friends screen, press the **Menu** key again, then touch **Most popular**.
- **To make a friend popular** — To ensure a friend is always displayed in your Most popular list, Touch & hold the friend's name until the options menu pops up, then touch **Always show friend**. To remove a friend from Always show friend, Touch & hold the friend, and touch **Auto-show friend**.
- **To block a friend** — To block a friend from exchanging messages and remove them from your friends list, Touch & hold the friend, then touch **Block friend**. All blocked friends can be viewed by pressing **Menu** key and touching **More/Blocked**. To unblock a friend, touch the name of this friend and touch **OK** when prompted.



Downloaded from www.Manualslib.com manuals search engine

### 4.3.5 Settings

A series of settings are available for your selection by pressing **Menu** key from Friends list screen, and touching **Settings**.

- **Automatically sign in** — Select to sign in to your Google Talk account automatically every time you turn on your phone.
- **Mobile indicator** — Select to display an indicator icon along with your name in other people's Friends list.
- **Automatic away status** — Select to set status as Away when the screen is turned off.
- **Clear search history** — Touch to clear previous chat searches history from showing up in the Search box.
- **IM notifications** — Mark/Unmark the checkbox to activate/deactivate the notify in status bar when a new message arrives.
- **Select ringtone** — Touch to set a notification ringtone.
- **Vibrate** — Touch to activate vibration alert for this service.
- **Invitation notifications** — Mark/Unmark the checkbox to activate/deactivate the notify in status bar when friend invitations are received.



# 5 Google Calendar & Alarm clock & Calculator

## 5.1 Google Calendar

Use Google Calendar to keep track of important meetings, appointments, etc.

To access this function, touch the Applications tab from the Home screen, then touch **Calendar**.

### 5.1.1 Multimode view

You can display the Calendar in daily, weekly, monthly, or agenda view.

To change your Calendar view, press the **Menu** key, then touch **Day**, **Week**, **Month** or **Agenda**.

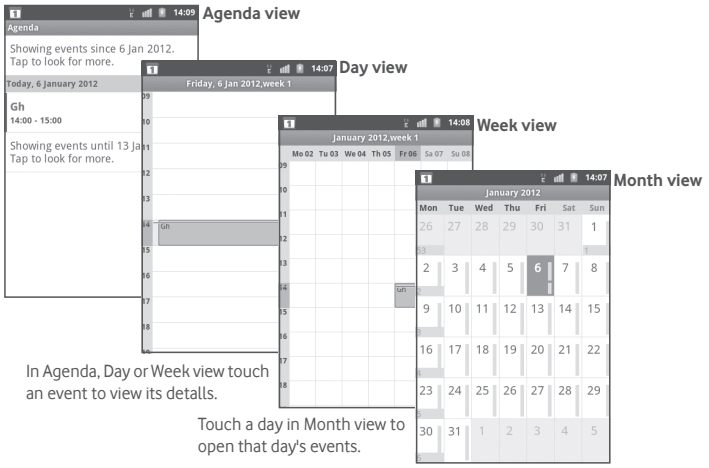




Downloaded from www.Manualslib.com manuals search engine

### 5.1.2 To create new events

You can add new events from any Calendar view.

- Press the **Menu** key from Calendar screen, and touch **More/New event** to access new event edit screen.
- Fill in all required information for this new event. If it is a whole-day event, you can select **All day**.
- Invite guests to the event. Enter the email addresses of the guests you want to invite with commas to separate. If the guests use Google Calendar, they will receive an invitation from Calendar and Email.
- When finished, touch **Done** from the end of the screen.

To quickly create an event from Day, Week or Month view screen, Touch & hold an empty spot or an event to open option menu, then touch **New event** to enter the event details screen of the time you have previously selected.

### 5.1.3 To delete or edit an event

To delete or edit an event, touch the event to enter details screen, press the **Menu** key, touch **Edit event**, or **Delete event**.

### 5.1.4 Event reminder

If a reminder is set for an event, the upcoming event icon will appear on Status bar as a notification when the reminder time arrives.

Touch and drag down the status bar to open the notification panel, touch event name to view Calendar notification list.

Touch **Snooze all** to turn off all event reminders for 5 minutes.

Touch **Dismiss all** to delete all reminders from the list.

Press the **Back** key to keep the reminders pending in the status bar and the notification panel.



Important options by pressing **Menu** key from Calendar main screen:

| | | |
|---|---|---|
| **More** | **New event** | To add a new event |
| | **My calendars** | To show, hide or synce calendars |
| | **Settingss** | To set a series of Calendar settings |

## 5.2 Clock

Your mobile phone has a built-in clock.

To access this function, touch the Applications tab from the Home screen, then touch **Clock**.

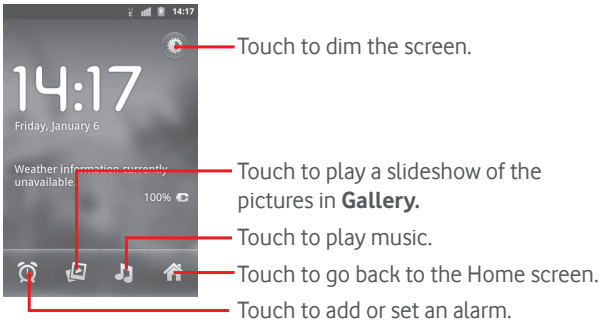




Downloaded from www.Manualslib.com manuals search engine

### 5.2.1 To set an alarm

From **Clock** screen, touch icon at the bottom of the screen to enter **Alarms** screen, touch **Add alarm** to add a new alarm, set the alarm time then touch **Set** to display the under options:

- **Turn alarm on** Touch to enable the alarm
- **Time** Touch to set time
- **Repeat** Touch to select days you want alarm to work
- **Ringtone** Touch to select a ringtone for the alarm
- **Vibrate** Select to activate vibration
- **Label** Touch to set a name for the alarm

When finished, touch **Done** to confirm.

Touch a currently existing alarm to enter alarm editing screen, touch **Delete** to delete the selected alarm.

### 5.2.2 To adjust alarm settings

Press the **Menu** key from **Alarms** screen, then touch **Settings**. The following options can now be adjusted:

- **Alarm in silent mode** Select to play alarm with sound or vibration even when the phone is in silent mode.
- **Alarm volume** Touch to set the volume of alarms.
- **Snooze duration** Touch to set temporary turn off time of an alarm.
- **Side button behavior** Touch to set side **Volume up/down** key and **Camera** key behaviors when alarm sounds: **None**, **Snooze** or **Dismiss.**



## 5.3 Calculator

With Calculator, you can solve many mathematical problems.

To access this function, touch the Applications tab from the Home screen, then touch **Calculator**.

There are two panels available: Basic panel and Advanced panel.

To switch between panels, select one of the following two ways:

- Touch and drag the basic screen to the left to open the Advanced panel.
- Or press the **Menu** key from basic panel to open option menu and touch **Advanced panel**.

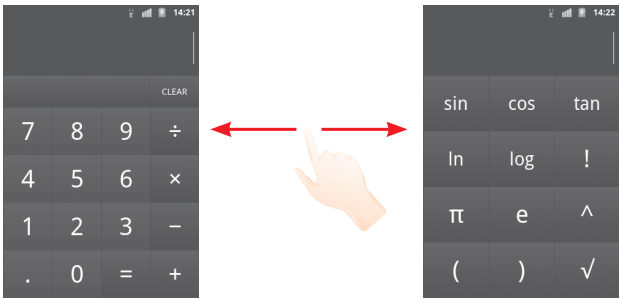


Enter a number and the arithmetic operation to be performed, enter the second number, then touch "=" to display the result. Touch **CLEAR** to delete digits one by one, Touch & hold **CLEAR** to delete all at one time.



Downloaded from www.Manualslib.com manuals search engine

# 6 Getting connected

To connect to the internet with this phone, you can use GPRS/EDGE/3G networks or Wi-Fi, whichever is most convenient.

## 6.1 Connecting to the Internet

### 6.1.1 GPRS/EDGE/3G

The first time you turn on your phone with SIM card inserted, it will automatically configure network service: GPRS, EDGE or 3G.

To check the network connection you are using, press the **Menu** key on the Home screen, then touch **Settings/Wireless & networks/Mobile networks/Access Point Names** or **Network operators**.

**To create a new access point**

A new GPRS/EDGE/3G network connection can be added to your phone with the following steps:

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Mobile networks/Access Point Names**.
- Then press the **Menu** key again and touch **New APN**.
- Enter the required APN information.
- When finished, press the **Menu** key and touch **Save**.

**To activate/deactivate Data roaming**

When roaming, you can decide to connect/disconnect to a data service.

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Mobile networks**.



- Mark/Unmark the **Data roaming** checkbox to activate or deactivate data roaming.
- When Data roaming is deactivated, you can still perform data exchange with a Wi-Fi connection (refer to "**6.1.2 Wi-Fi**").

**To limit your data connection to 2G networks only**

To save battery and extend battery life, you can set to activate 2G networks (GPRS or EDGE) only.

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Mobile networks**.
- Mark/Unmark the **Use only 2G networks** checkbox to activate/deactivate this function.

### 6.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on your phone even without a SIM card inserted.

**To turn Wi-Fi on and connect to a wireless network**

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks**.
- Mark/Unmark the **Wi-Fi** checkbox to turn Wi-Fi on or off.
- Touch **Wi-Fi settings**. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you will be asked to enter a password or other credentials (you may need to ask the Wi-Fi network owner for details). When finished, touch **Connect**.



Downloaded from www.Manualslib.com manuals search engine

**To activate notification when a new network is detected**

When Wi-Fi is on and the network notification is activated, the Wi-Fi icon will appear on the status bar whenever the phone detects an available wireless network within range. The following steps activate the notification function:

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Wi-Fi settings**.
- Mark/Unmark the **Network notification** checkbox to activate/deactivate this function.

**To add a Wi-Fi network**

When Wi-Fi is on, you may add new Wi-Fi networks according to your preference.

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Wi-Fi settings/Add Wi-Fi network**.
- Enter the name of the network and any required network information.
- Touch **Save**.

When successfully connected, your phone will be connected automatically the next time you are within range of this network.

**To forget a Wi-Fi network**

The following steps prevent automatic connections to networks which you no longer wish to use.

- Turn on Wi-Fi, if it's not already on.
- In the Wi-Fi settings screen, touch & hold the name of the network.
- Touch **Forget network** in the dialog that opens.



**To add a WPS network**

WPS (Wi-Fi Protected Setup) is an easy way for users to access Wi-Fi network by entering PIN or using push button.

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless&networks/Wi-Fi settings/Add WPS network**.
- Enter PIN number or use push button.
- Touch **Start** to get access to a WPS network.

## 6.2 Browser

The **Browser** lets you surf the web, just like on your computer.

To quickly get onto the web from the Home screen, simply touch the **Browser** icon . You'll also find the **Browser** in Applications.

**To go to a web page**

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch .

**To set homepage**

- Press the **Menu** key from Browser screen to display option menu, touch **More/Settings/Set homepage**.
- Enter the URL of the website you want to set as your homepage.
- Finally touch **OK** to confirm.



Downloaded from www.Manualslib.com manuals search engine

### 6.2.1 Viewing web pages

When opening a website, you can navigate on web pages by sliding your finger on the screen in any direction to locate the information you want to view.

**To zoom in/out of a web page**

Zoom controls will be activated when scrolling the screen using your finger. Touch the plus or minus on the side of the Zoom control to zoom in or out.

To quickly zoom into a section of a web page, double-tap on the section you want to view. To return to normal zoom level, double-tap again.

**To find text on a web page**

- Press the **Menu** key from web page screen, then touch **More/Find on page**.
- Enter the text or phrase you want to find.
- The first word with matching characters will be highlighted on the screen, and subsequent matches will be boxed.
- Touch the left or right arrow to switch to the previous or next matching items.
- When finished, you can touch to close the search bar.

**To copy text on a web page**

You can copy text from a web page and paste it into emails or SMS/MMS messages.

- Press the **Menu** key from web page screen, then touch **More/Select text**.
- Place your finger at the start of the text you want to copy and then drag it to the end of the text.
- Selected text is copied and highlighted in color.
- Release your finger.



To paste the copied text into an email or SMS/MMS message, Touch & hold the enter box and then touch **Paste** on the options menu.

**To open new window/switch between windows**

Multiple windows can be opened at the same time for your convenience.

- Press the **Menu** key from web page screen, and touch **New window**.
- To view all currently open windows, press the **Menu** key then touch **Windows,** or pinch current web pages.
- Touch a window you want to view.

To close a window, touch ✖ on the window you want to close.

**Other options:**

- **Refresh** To refresh the current page (press the **Menu** key on web page screen, then touch **Refresh**).
- **Forward** To forward the pages you have opened (press the **Menu** key on web page screen, then touch **More/Forward**).
- **Page info** To view more information about the current page (press the **Menu** key on web page screen, then touch **More/Page info**).
- **Share page** To share the current page with your friends via various ways, like Message, Email, Bluetooth, etc. (press the **Menu** key on web page screen, then touch **More/Share page**).



Downloaded from www.Manualslib.com manuals search engine

### 6.2.2 Manage links, history, downloads

**To manage a link, phone number or address displayed on a web page**

- **Link** Touch the link to open the web page.
  Touch & hold the link to open options for further operation, like open in new window, save link, share link, copy link, etc.
- **Phone number** Touch to call the phone number.
- **Address** Touch to open Google Maps and locate the address

**To view Browser history**

- Press the **Menu** key from Browser screen.
- Touch **Bookmarks**.
- Touch **History** tab to view browser history.

**To view your most frequently visited pages**

- Press the **Menu** key from Browser screen.
- Touch **Bookmarks.**
- Touch **Most visited** tab to view your most frequently visited pages.

**To download a web application/view your downloads**

Before downloading a web application, you need to enable your phone to download web applications (press the **Menu** key from the Home screen, touch **Settings/Applications**, mark check box of **Unknown sources**, finally touch **OK** to confirm).

To download a file, Touch & hold the item you want to download, then touch **Save** on the menu that opens.

To cancel a download, press the **Menu** key and touch **More/Downloads**, then touch **Menu** key again and finally touch **Cancel all downloads**.



To view items you have downloaded, press the **Menu** key and touch **More/ Downloads**. You can clear the downloaded item list by pressing **Menu** key and touching **Clear list**.

### 6.2.3 Manage bookmarks

**To bookmark a web page**

- Open the web page you want to bookmark.
- Touch the bookmark icon at the top of the screen, or press the **Menu** key and touch **Bookmarks**.
- Touch **Add.**
- Enter the name and the location if needed and touch **OK** to confirm.

**To open a bookmark**

- On the **Bookmarks** tab, touch the bookmark you want to open.
- You can also touch & hold to display the options screen, then touch **Open** or **Open in new window**.

**To edit a bookmark**

- On the **Bookmarks** tab, touch & hold the bookmark you want to edit.
- Touch **Edit bookmark**.
- Enter your changes.
- When finished, touch **OK** to confirm.

**Touch & hold a bookmark in the Bookmark tab to view more additional options:**

- **Add shortcut to Home** To add a bookmark shortcut to the Home screen.
- **Share link** To share the bookmark.
- **Copy link URL** To copy the bookmark link.
- **Delete bookmark** To delete a bookmark.
- **Set as homepage** Set the select bookmark as Homepage.



Downloaded from www.Manualslib.com manuals search engine

### 6.2.4 Settings

A series of settings are available for your adjustment. To access Browser settings, press the **Menu** key from Browser screen, and touch **More/Settings**.

**Page content settings**

- **Text size** Touch to select the size of the text display: Tiny, Small, Normal, Large, or Huge.
- **Default zoom** Touch to select the magnification level by default.
- **Open pages in overview** Mark the checkbox to open web pages zoomed out, in an overview.
- **Text encoding** Touch to select the character encoding standard.
- **Block pop-up windows** Mark the checkbox to prevent pop-up windows.
- **Load images** Mark to display images on web pages.
- **Auto-fit pages** Mark to format web pages to fit the screen.
- **Landscape-only display** Mark to display pages only in landscape screen orientation.
- **Enable JavaScript** Mark to enable JavaScript.
- **Enable plug-ins** Mark to enable plug-ins.
- **Open in background** Mark to open new windows behind the current one.
- **Set homepage** Touch to set homepage.



**Privacy settings**

- **Clear cache** Touch to clear locally cached content and databases.
- **Clear history** Touch to clear the browser history.
- **Accept cookies** Mark to allow sites to save and read cookie data.
- **Clear all cookie data** Touch to clear all browser cookies.
- **Remember form data** Mark to remember data in forms for later use.
- **Clear form data** Touch to clear all the saved form data.
- **Enable location** Mark to allow sites to request access to your location.
- **Clear location access** Touch to clear location access for all websites.

**Security settings**

- **Remember passwords** Mark to save usernames and passwords for websites.
- **Clear passwords** Touch to clear all saved passwords.
- **Show security warnings** Mark to show warning if there is a problem with a site's security.

**Advanced settings**

- **Set search engine** Touch to select a search engine.
- **Website settings** Touch to view advanced settings for individual websites.
- **Reset to default** Touch to clear all browser data and to reset all settings to default.



Downloaded from www.Manualslib.com manuals search engine

## 6.3 Connecting to Bluetooth devices

Bluetooth is a short-range wireless communication technology that you can use to exchange data, or connect to other Bluetooth devices for various uses.

To access this feature, press the **Menu** key from the Home screen, touch **Settings/Wireless & networks/Bluetooth** or **Bluetooth settings**.

**To turn on Bluetooth**

- Press the **Menu** key from the Home screen,
- Touch **Settings/Wireless & networks/Bluetooth** or **Bluetooth settings**.
- Mark/Unmark the **Bluetooth** checkbox to activate/deactivate this function.

**To change device name**

To make your phone more recognizable, you can change your phone name which is visible to others.

- Press the **Menu** key from the Home screen,
- Touch **Settings/Wireless & networks/Bluetooth settings/Device name**.
- Enter a name, and touch **OK**.

**To make device visible**

- Press the **Menu** key from the Home screen,
- Touch **Settings/Wireless & networks/Bluetooth settings**.
- Mark/Unmark the **Discoverable** checkbox to activate/deactivate this function.

**To pair/connect your phone with a Bluetooth device**

To exchange data with another device, you need to turn Bluetooth on and pair your phone with the Bluetooth device with which you want to exchange data.

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Bluetooth settings.**



- Touch **Scan for devices**.
- Select a Bluetooth device you want to be paired with in the list.
- Enter a passcode (0000 or 1234).
- If the pairing is successful, your phone connects to the device.

**To disconnect/unpair from a Bluetooth device**

- Touch & hold the device in the Bluetooth settings screen.
- Touch **Unpair** or **Disconnect & Unpair** in the menu that opens.

## 6.4 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your phone's microSD card and the computer.

**To connect/disconnect your phone to/from the computer**

To connect your phone to the computer:

- Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
- Open the Notification panel and touch **USB connected**.
- Touch **Mount USB storage** in the dialog that opens to confirm that you want to transfer files.

To disconnect:

- Unmount the microSD card on your computer.
- Open the Notification panel and touch **Turn off USB storage**.
- Touch **Unmount USB storage** in the dialog that opens.



Downloaded from www.Manualslib.com manuals search engine

**To safely remove the microSD card from your phone**

The microSD card can be removed from your phone any time the phone is powered off. To remove the microSD card while the phone is on, you must unmount the storage card from the phone first, to prevent corrupting or damaging the storage card.

- Press the **Menu** key from the Home screen,
- Touch **Settings/SD card & phone storage**.
- Touch **Unmount SD card**.

You can now safely remove the microSD card from the phone.

**To format a microSD card**

- Press the **Menu** key from the Home screen,
- Touch **Settings/Storage**.
- Touch **Erase SD card**. On the screen a popup warns you that formatting the microSD card will erase its contents, touch Erase SD card .

## 6.5 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.

The functions below may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

**To share your phone's data connection via USB**

Use the USB cable that along with your phone to connect the phone to a USB port on your computer.

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Tethering & portable hotspot.**
- Mark/unmark the check box of **USB tethering** to activate/deactivate this function.



**To surf the internet via USB tethering**

- Use the USB cable to connect the phone and your computer.
- Touch **Mount USB storage**.
- Copy Android RNDIS driver from microSD card/PC USB Driver to your computer.
- Open the Notification panel and touch **Turn off USB storage** then **Unmout USB storage** in the dialog that opens.
- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Tethering & portable hotspot.**
- Activate the **USB tethering** function.
- Install Android RNDIS driver into your computer by manual.
- Then go to PC/My Network Places/Properties, you will see Local Area Connection with "Vodafone Smart II Network Adapter".
- Now you can surf the internet on your computer.

**To share your phone's data connection as a portable Wi-Fi hotspot**

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Tethering & portable hotspot**.
- Mark/unmark the check box of **Portable Wi-Fi hotspot** to activate/deactivate this function.

**To rename or secure your portable hotspot**

When Portable Wi-Fi hotspot is activated, you could change the name of your phone's Wi-Fi network (SSID) and secure its Wi-Fi network.

- Press the **Menu** key from the Home screen.
- Touch **Settings/Wireless & networks/Tethering & portable hotspot/Portable Wi-Fi hotspot settings**.
- Touch **Configure Wi-Fi hotspot** to change the network SSID or set your network security.
- Touch **Save**.



Downloaded from www.Manualslib.com manuals search engine

## 6.6 Connecting to virtual private networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network from outside that network. VPNs are commonly deployed by corporations, schools, and other institutions so that their users can access local network resources when not inside that network, or when connected to a wireless network.

**To add a VPN**

- Press the **Menu** key from the Home screen,
- Touch **Settings/Wireless & networks/VPN settings/Add VPN**.
- Touch the type of VPN to add.
- In the screen that opens, follow the instructions from your network administrator to configure each component of the VPN settings.
- Press the **Menu** key and touch **Save**.

The VPN is added to the list on the VPN settings screen.

**To connect/disconnect to a VPN**

To connect to a VPN:

- Press the **Menu** key from the Home screen,
- Touch **Settings/Wireless & networks/VPN settings**.
- VPNs you have added are listed; touch the VPN you want to connect with.
- In the dialog that opens, enter any requested credentials and touch **Connect**.

To disconnect:

- Open the Notification panel and touch the resulting notification for the VPN connection.



**To edit/delete a VPN**

To edit a VPN:

- Press the **Menu** key from the Home screen,
- Touch **Settings/Wireless & networks/VPN settings**.
- VPNs you have added are listed; touch & hold the VPN you want to edit.
- Touch **Edit network**.
- After finished, press the **Menu** key and touch **Save**.

To delete:

- Touch & hold the VPN you want to delete, in the dialog that opens, touch **Delete network**.
- Touch **OK** to confirm.



Downloaded from www.Manualslib.com manuals search engine

# 7 Google Play Shop [1] .....

Google Play Shop is an online software store, where you can download and install applications and games to your Android Powered Phone.

To open Google Play Shop:

- Touch the Applications tab from the Home screen, and then touch **Play Shop**.
- For the first time you access Google Play Shop, a screen with terms of service pops up for your attention, touch **Accept** to continue.

Press the **Menu** key, then touch **Help** to enter Google Play Shop help page for more information on this function.

## 7.1 Locate the item you want to download and install

Google Play Shop home page provides several ways to find applications. It showcases applications and games in categorized listings, and has a link to all your downloads.

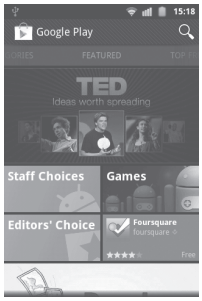


[1] Depending on your country and operator.



Touch **Apps** or **Games** on Google Play Shop screen to browse its contents, and then select subcategory. Within each subcategory you can select to view items sorted by **Top paid**, **Top free**, or **Just in**.

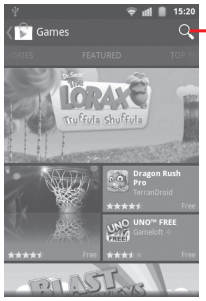


Touch to search in Google Play Shop.

To return to Google Play Shop Home screen, do one of the followings:

- Touch the Play Store icon on the top left of the screen.
- Press the **Menu** key to display options list, then touch **Home**.

## 7.2 Download and install

**To download & install:**

- Navigate to the item you want to download, and select to enter the details screen from which you can read its overall rating or comments, view developer's information, etc.
- Press the **Menu** key and touch **Security** to preview the functions and data the application can access on your phone if you install it.
- Touch **Install**.

Be especially cautious with applications that have access to many functions or to a significant amount of your data. Once you touch **OK** to continue, you are responsible for the results of using this item on your phone.



Downloaded from www.Manualslib.com manuals search engine

- To check the progress of the download, open the Notification panel. To stop the downloading of the item, touch the progress bar and **Cancel** on the screen that opens.
- After download and installation have finished, you will see a notification icon on the status bar.

**To open the application you have downloaded:**

- On Google Play Shop screen, press the **Menu** key and touch **My apps**.
- Touch the installed application in the list, then touch **Open**.

**To buy an application**

On Google Play Shop, some applications are labeled as free, while some of them are to be paid for before downloading and installing.

- Touch the application you want to buy.
- Touch **Buy** on the bottom of the screen.
- When making your first purchase, you are prompted to log in to Google Checkout payment and billing service.
- If your Google Checkout account has multiple credit card accounts, select one to proceed.
- Select the Terms of service link and read the document. When finished, press the **Back** key.
- Mark the check box if you agree with the terms of service.
- Touch **Buy now** at the bottom of the screen.

When finished, Android downloads the application.



**To request a refund**

If you are not satisfied with the application, you can ask for a refund within 24 hours of the purchase. Your credit card will not be charged and the application will be removed. If you change your mind, you can install the application again, but you will not be able to request a refund.

- Press the **Menu** key and touch **My apps** in Google Play Shop Home.
- Touch the application that you want to uninstall.
- Touch **OK** in the **Uninstall & refund** dialog box. If the dialog box does not appear, your trial period has expired.
- In the survey form, select the answer that best matches your reason, and touch **OK**.

## 7.3 Manage your downloads

After you downloaded and installed an application, the following further operations are available for your selection.

**View**

On Google Play Shop screen, press the **Menu** key and touch **My apps**.

**Uninstall**

On Google Play Shop screen, press the **Menu** key and touch **My apps**. Touch the application you want to uninstall to enter the details screen, touch **Uninstall**, and finally touch **OK** to confirm.

**Refund**

On Google Play Shop screen, press the **Menu** key and touch **My apps.** Touch the application you want to uninstall for a refund, touch **Uninstall & refund**, and finally touch **OK** to confirm.



Downloaded from www.Manualslib.com manuals search engine

### Update notification

On Google Play Shop screen, press the **Menu** key and touch **My apps**. Press the **Menu** key and touch **Notification**, select whether or not to be notified of updates, and finally touch **OK** to confirm.

### Rate

Open the details screen for an application, touch the stars under **My review** to award and touch **OK** to confirm.

### Flag

You can report an inappropriate application to Google Play Shop by flagging it. Open the details screen for the application, scroll to the bottom and touch **Flag as inappropriate**, enter the reason and finally touch **Submit**.



# 8 Multimedia applications

## 8.1 Camera/Camcorder.....

Your mobile phone is fitted with a Camera and a Camcorder for taking photos and shooting videos.

Before using the Camera or Camcorder, please ensure that a microSD card where all pictures and videos are stored is correctly installed. Also, be sure to open the protective lens cover before use to avoid it affecting your picture quality.

To access this function, touch the Applications tab from the Home screen and then touch **Camera** or **Camcorder**.

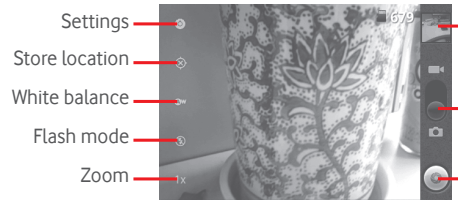


### To take a picture

The screen acts as the viewfinder. First position the object or landscape in the viewfinder, and touch icon to take the picture, which will be automatically saved.

### Zoom in/zoom out

Touch 1x icon to open the Zoom control and slide the scroll bar to zoom in or out gradually. Touch the screen twice to zoom all the way in or out.



Downloaded from www.Manualslib.com manuals search engine

**To shoot a video**

Switch Camera mode to Video mode or access Camcorder directly from the applications list. First position the object or landscape in the viewfinder, and touch icon to start recording. Touch icon to stop shooting. The video will be automatically saved.

**Further operations when viewing a picture or a video you have taken:**

Touch to set the picture as a contact icon, wallpaper, etc.

Touch to share the picture or video you have just taken or shot by Bluetooth, MMS, gmail, etc.

Touch to delete the picture or video you have just taken or shot.

Touch to enter **Slideshow**.

Touch to return to frame mode after viewing a picture or shooting a video.

Touch to play the video you have just shot.

Press the **Menu** key or Touch & hold the picture to display more operations such as **Rotate left**, **Rotate right**, **Crop** and **Details** etc. (refer to"**Working with pictures**")



### 8.1.1 Settings in framing mode

Before taking a photo/shooting a video you can adjust a number of settings in framing mode.

**Camera settings**

- **Settings** — Touch to enter a scrolling list of settings: Exposure, Picture size, Picture quality, etc.
- **Store location** — Touch to turn on/off stored location information of pictures by using the phone's GPS.
- **White balance** — Touch to adjust color in different lights: Auto, Incandescent, Daylight, Fluorescent or Cloudy.
- **Flash mode** — Touch to turn on/off flash mode or set as auto.
- **Zoom** — Touch to open the Zoom control and slide the scroll bar to zoom in or out gradually.

**Video/Camcorder settings:**

- **Settings** — Touch to enter a scrolling list of settings: Colour effect, Remaining time, etc.
- **Store location** — Touch to turn on/off stored location information of pictures by using the phone's GPS.
- **White balance** — Touch to adjust color in different lights: Auto, Incandescent, Daylight, Fluorescent or Cloudy.
- **Flash mode** — Touch to turn on/off flash mode.
- **Video quality** — Touch to set video quality.

**Advanced settings (**Press the **Menu** key**):**

- **Preview photo/video** — Touch to preview your photo or video.
- **Switch to camera/ video** — Touch to switch between camera and video.



Downloaded from www.Manualslib.com manuals search engine

## 8.2 Gallery

Gallery acts as a media player for you to view photos and playback videos. In addition, a set of further operations to pictures and videos are available for your choice (refer to "**8.1.1 Settings in framing mode**").

To access this function, touch the Applications tab from the Home screen, then touch **Gallery.**

From this menu, you can access Camera or Camcorder for taking a picture or video.

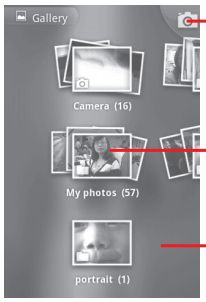


Touch to open camera.

Pinch the album and spread it apart.

Slide left or right to view more albums.

### To view a picture/play a video

Pictures and videos are displayed by albums in **Gallery**.

Touch and scroll the bar to switch. This will change the album view from grid to stack.

Drag left or right to scroll through the album quickly.



- Touch an album, pinch it with two fingers and then all pictures or videos will spread the screen.
- Touch the picture/video directly to view or play it.
- Slide left/right to view previous or next pictures/videos.

### Working with pictures

You can work with pictures by rotating or cropping them, sharing them with friends, setting them as contact ID or wallpaper, etc.

Locate the picture you want to work on, press the **Menu** key from full-screen picture view.

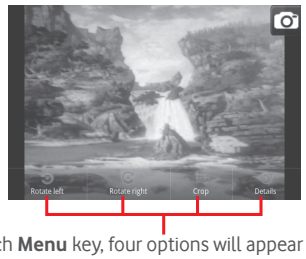


Touch **Menu** key, four options will appear below.

To crop a picture, touch a picture to view controls and touch **Menu/Crop**. The cropping square appears in the middle of the picture. Select the portion to crop, touch and Save.

### Batch operation

Gallery provides a multi-select function, so that you can work with pictures/ videos in batches.

Open the main Gallery window or an alblum, press the **Menu** twice or Touch & hold one alblum/picture, and mark the checkbox before the file you want to work on, then perform further actions, like delete, share, etc.



Downloaded from www.Manualslib.com manuals search engine

## 8.3 YouTube

YouTube is an online video-sharing service where the user can download, share and view videos. It supports a streaming function that allows you to start watching videos almost as soon as they begin downloading from the Internet.

To access this function, touch the Applications tab from the Home screen, then touch **YouTube**.

As an online video service, your phone must have a network connection to access YouTube.

All videos in YouTube are grouped into several categories, like Most popular, Most viewed, Top rated, etc.

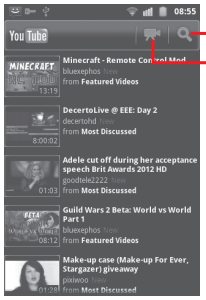


By pressing **Menu** key from YouTube screen, you can rate, share, label as favourite, etc. For details about these features, please visit the YouTube website: www.YouTube.com



### 8.3.1 Watch videos

Touch a video to play it.

Touch video playing screen to display playback controls with which you can pause, skip forward or backward, or drag the progress bar to the point you want to watch.

To exit video playing screen, press the **Back** key to return to the video list.

## 8.4 Music

Using this menu, you can play music files stored on the microSD card in your phone. Music files can be downloaded from computer to microSD card using an USB cable.

To access this function, touch the Applications tab from the Home screen, then touch **Music**.

You will find four libraries in which all songs are classified: **Artists**, **Albums**, **Songs**, and **Playlists**. Touch a category and view the list.

With the help of **Search** key, you can easily search for songs you want to play in libraries.

To delete a song, press the **Menu** key from playback screen and then touch **Delete** to remove it from the microSD card.

You can also set a song as a ringtone, press the **Menu** key from playback screen to display option menu, then touch **Use as ringtone**.



Downloaded from www.Manualslib.com manuals search engine

### 8.4.1 Playing music

From any of the four library screens, touch a song to play it back.

a Touch to open the current playlist.

b Touch to play the current playlist in shuffle mode (tracks are played in random order).

c Touch to toggle repeat mode: Don't repeat, Repeat the playlist, or Repeat the current track.

d Touch & hold to search for more information.

e Touch to skip to the previous track in the album, playlist, or shuffle.

f Touch to pause/resume playback.

g Touch to skip to the next track in the album, playlist, or shuffle.

**Adjust volume**

To adjust the volume, you can press the **Volume up** and **Volume down** key.

### 8.4.2 Using Party shuffle

All songs will be displayed in order by default. When Party shuffle is activated, some songs will be selected and played at random. Press the **Menu** key, then touch **Party shuffle** to turn on this function. To turn it off, press the **Menu** key again, then touch **Party shuffle off**.



### 8.4.3 Working with playlists

Playlists allow you to conveniently organize all the songs stored in the card.

You can create a new playlist, add a song to the list, rearrange the order of the list, and delete or rename a playlist.

**To create a playlist**

Press the **Menu** key from playback screen to display the option menu, touch **Add to playlist**, then touch **New**, enter the name and finally touch **Save**.

**To change the order of songs in a playlist**

Enter a playlist, drag a song up or down to change the order within the playlist.

**To delete a song or a playlist**

Locate the song or playlist you want to delete, Touch & hold or press the **Menu** key from playback screen to display option menu, then touch **Delete**.

**To rename a playlist**

Locate the playlist you want to rename, Touch & hold to display option menu, then touch **Rename**. When finished, touch **Save**.

## 8.5 Sound Recorder .....

To access this function, touch the Applications tab from the Home screen, then touch **Sound Recorder**.

**Sound Recorder** allows you to record voice/sound for seconds/hours.



Downloaded from www.Manualslib.com manuals search engine

## 8.6 Videos

To access this function, touch Application tab from the Home screen, then touch **Videos**.

**Videos** is a small built-in video player that lists all your videos.

Touch an item from the list to play. While playing, use Pause, Forward and Back functional icons as required, touch a point on the timeline to jump to and play from.

## 8.7 FM Radio

Your phone is equipped with a radio [1] with RDS [2] functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service.

To access this function, touch the Applications tab from the Home screen, then touch **FM Radio**.

To use it, you must plug in your headset, which works as an antenna connected with your phone.

[1] The quality of the radio depends on the coverage of the radio station in that particular area.

[2] This function depends on the country you are based in.



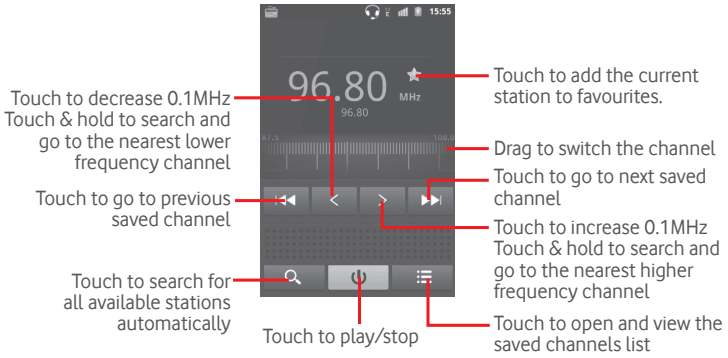


**Available options:**

- **Save channel** Save the current tuned station to the channels list.
- **Edit name** Edit the channel name.
- **Audio mode** Listen to the radio using loudspeaker or headset.
- **Exit** Turn off the radio.
- **Enter frequency** Enter the frequency manually.
- **Settings** Customise radio settings according to preference.
- **Delete** Delete the channel



Downloaded from www.Manualslib.com manuals search engine

# 9 Google Maps .....

## 9.1 Get My Location

### 9.1.1 Choose a data source to decide My Location

Press the **Menu** key from the Home screen, touch **Settings/Location & security**.

- Mark the check box of **Use wireless networks** to set Wi-Fi and/or mobile networks as My Location data source.
- Or mark the check box of **Use GPS satellites** to set GPS as My Location data source.

### 9.1.2 Open Google Maps and view My Location

Touch the Applications tab from the Home screen, then touch **Maps**.

The map will then center on a blue dot with a blue circle around. Your actual position is within the blue circle.

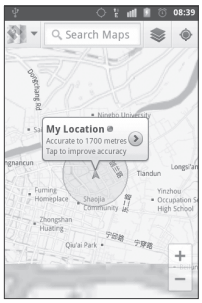


To move the map, drag the map with your finger.



To zoom in and out of a map, touch the plus or minus side of the zoom control + −, or you can also zoom in/out by double-tapping a location on screen.

To clear the map history, press the **Menu** key and touch **Clear Map**.

## 9.2 Search for a location

While viewing a map, press the **Menu** key and touch **Search**, or you can directly press the **Search** key on keyboard to activate search function.

In the search box, enter an address, a city or a local business.

Touch the search icon and in a while your search results will appear on the map highlighted by markers with letter labels.

You can touch a marker to open a balloon that contains a label. Touch the balloon to open a screen with more handy information about the location.



Downloaded from www.Manualslib.com manuals search engine

## 9.3 Star a location

Just like bookmarking a web address on the Internet, you can star any position on the map for later use.

### 9.3.1 How to star (or unstar) a location

- Touch & hold a location on a map
- Touch the address rectangle that opens
- Touch the gray star at the top of the screen to star the location. (Or touch a gold star to unstar that location.)

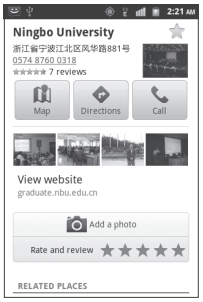


### 9.3.2 View a list of starred items

Press the **Menu** key from maps screen and touch **More/My Places.**

The list of your starred items and their addresses opens.

Touch a location in the list to view it .

Press the **Menu** key and touch **Refresh** to update the list.



## 9.4 Get driving, public transport or walking directions

### 9.4.1 Get suggested routes for your trip

Press the **Menu** key from maps screen and touch **Directions**.

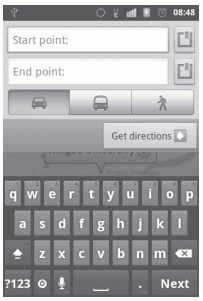


- Touch enter bar or to edit your start point by one of the following methods: entering an address, using My Location, selecting a start point on a map, selecting a starred item, selecting an address from your contacts or using search history.
- Do likewise for your end point.
- To reverse directions, press the **Menu** key and touch **Reverse Start & End**.
- Then select a transport mode: driving by car, using public transport, or walking directions.
- Finally touch **Get directions**.
- A couple of suggested routes will appear in a list. Touch any routes to view their respective detailed directions.

To get reverse directions for a route you've already made, simply open that route's directions window and select **Reverse**. No need to enter your start point and end point again.



Downloaded from www.Manualslib.com manuals search engine

### 9.4.2 Preview suggested routes and decide on a route more preferable or feasible to you

You can preview each turn in your route in Navigation, Satellite, and other views.

- Touch a left or right arrow to preview the next or previous leg of your route.
- You can view turn-by-turn directions in a list by touching , press the **Back** key to return to previous view.

When selecting a more preferable or feasible route, distance and time will be the two most important factors for your evaluation. Distance and estimated time will be displayed at the top of the directions screen.

### 9.4.3 Search for locations along your route

Please refer to "**9.2 Search for a location**" for detailed information.

### 9.4.4 View route progress and calculate estimated arrival time

To view your route progress, pinpoint My Location, zoom out until the whole route goes into one screen, with both finished and unfinished miles in sight.

Start another Directions screen based on your current and intended destination locations. Estimated arrival time will be shown in the results. Please note that the estimated arrival time is not available for the public transport mode.

### 9.4.5 View traffic conditions on your route

At the lower-left corner of navigation view, a traffic light indicates the overall traffic conditions on your route, next to the estimated time of arrival at your destination. You can also view the traffic conditions on each segment of your route.

Touch the traffic light at the lower left of the Navigation View. Your route opens in Traffic View, with color coding to indicate the traffic along the way. Touch the navigation icon to return to your current location in Navigation View.



### 9.4.6 Get an alternative route to your destination

If traffic is slow on your current route, or if you just want to try a different route, you can request an alternative route from Google Maps with turn-by-turn Navigation service.

Press the **Menu** key and touch **Route information**. Touch the alternative route icon. An alternative route is drawn on the map.

## 9.5 Arrangement of layers

Layers allow you to view locations and additional information overlaid on the map. You can add multiple layers or remove only certain layers so you control exactly what information you want visible on the map at one time.

### 9.5.1 To view multiple layers

- Touch from maps screen.
- All available layers are listed (like Traffic, Satellite, Latitude, etc), select one to view.

### 9.5.2 To clear the map

After you get directions or search on a map, you can clear the markers/layers that have been drawn: press the **Menu** key on maps screen and touch **Clear Map**, or you can also touch **Clear Map** on Layers screen.

## 9.6 Join Latitude to see your friends' locations and share yours with them

With Google Latitude, you can:

- see your friends' locations on a map or in a list.
- quickly contact your friends with a text message, instant message, or phone call.
- you can share, set, hide your location, or sign out of Google Latitude.
- control who sees your location, and at what level of detail.
- add Latitude widget to home screen to see nearby friends at a glance.



Downloaded from www.Manualslib.com manuals search engine

### 9.6.1 To join Latitude

- Press the **Menu** key from maps screen.
- Touch **More/Join Latitude**.

When you joined Latitude, the menu item changes to **Latitude**.

To open Latitude, press the **Menu** key from maps screen, then touch **Latitude**.

### 9.6.2 How to invite friends to share their locations

- Press the **Menu** key from Latitude screen, touch **Add friends**.
- Touch **Select from Contacts** or **Add via email address**.
- After selecting your chosen contacts touch **Add friends** at the bottom of the screen.

When finished, an invitation will be sent to the friends you have invited.

To respond to an invitation, you can select one of the followings:

- **Accept and share back** — You and your friend can share locations with each other.
- **Accept, but hide my location** — You can view your friend's location, but they can not view yours.
- **Don't accept** — No locations can be shared between you and your friend.

### 9.6.3 To view your friends' location

You can view your friends' locations on a map or in a list.

- **Map view** — When Google Maps is opened, your friends' locations will display with their photo icons for identification.
- **List view** — Press the **Menu** key from maps screen, then touch Latitude. Your friends are displayed in a list.



### 9.6.4 To connect with your friends

Select a contact, you can communicate with your friend and set privacy options.

- **Show on map** — Locate the friend's position on the map.
- **Chat using Google Talk** — Send instant messages to the friend.
- **Send email** — Send emails to the friend.
- **Directions** — Get directions to this friend's location.
- **Hide from this friend** — Set to hide your location from this friend.
- **Share only city level location** — Set to share locations only at city level, instead of street level, etc.
- **Remove** — Remove this friend from your list and stop sharing information with him or her.



Downloaded from www.Manualslib.com manuals search engine

### 9.6.5 To control what you share

You can control the information you want to share with your friends.

Press the **Menu** key from maps screen, touch **Latitude**, touch your own name and then touch **Edit privacy settings**.

The following options are available to choose from:

- **Location reporting/ Detect your location** Enable Latitude to detect your location automatically when you move around.
- **Location reporting/ Set your location** Select a location on the map manually.
- **Location reporting/ Do not update your location** Your location is not updated and your friends cannot see it.
- **Enable location history** Mark to hide your location history.
- **Manage your friends** Touch to add or remove friends who can see your location.
- **Sign out of Latitude** Deactivate Latitude and stop sharing.



# 10 Others

## 10.1 FileManager

To access FileManager, touch the Applications tab from the Home screen, then touch **FileManager**.

**FileManager** works with your SD card instead of your phone memory. To use it, you have to install your SD card first. See "**Installing and removing the microSD card**".

**FileManager** displays all data stored on the microSD card, including applications, media files downloaded from Google Play Shop, YouTube or other locations; videos, pictures or audios you have captured; other data transferred via Bluetooth, USB cable, etc.

When you download an application from PC to microSD card, you can locate the application on FileManager, then touch it to install it in your phone.

FileManager allows you to perform and be really efficient with the following common operations: create (sub) folder, open folder/file, view, rename, move, copy, delete, play, share, etc.

## 10.2 SyncML Client

To access this function, touch the Applications tab from the Home screen, then touch **SyncML Client**.

You have to configure your own sync-hosting server account to locate the synchronization source at the other side. Also you might be asked to decide on the following options:

- **Who to sync:** account name, username and password are needed to authenticate your identity.



Downloaded from www.Manualslib.com manuals search engine

- **How to sync:** available synchronization types are two-way synchronization, backup to server, restore from server, export to server, and import from server.
- **What to sync:** supported synchronization applications are Contacts and Calendar, each with an independent secure database that doesn't allow anonymous access.
- **When to sync:** synchronize when roaming, synchronize when data is modified, synchronize when phone is turned on or synchronize at a regular basis (daily, weekly or monthly).

## 10.3 Torch

To access this function, touch the Applications tab from the Home screen, then touch **Torch**.

**Torch** is an application which can provide power light for your convenience and you can select to turn on/off or adjust the brightness as needed.

## 10.4 Other applications [1]

The previous applications in this section are preinstalled on your phone. To read a brief introduction of the preinstalled 3rd party applications, please refer to the leaflet provided with the phone. You can also download thousands of 3rd party applications by going to Google Play Shop on your phone.

[1] Application availability is dependent on the country you're based in.



# 11 Settings

To access this function, touch the Applications tab from the Home screen, and touch **Settings** on main menu, or you can also press the **Menu** key from the Home screen and touch **Settings**.

## 11.1 Wireless & networks

### 11.1.1 Airplane mode

Mark the check box of **Airplane mode** to simultaneously disable all wireless connections including Wi-Fi, Bluetooth and more.

### 11.1.2 Wi-Fi

Using Wi-Fi you can now surf the Internet without using your SIM card whenever you are in range of a wireless network. The only thing you have to do is to enter the **Wi-Fi settings** screen and configure an access point to connect your phone to the wireless network.

For detailed instructions on using Wi-Fi, please refer to "**6.1.2 Wi-Fi**".

### 11.1.3 Bluetooth

Bluetooth allows your phone to exchange data (videos, images, music, etc.) in a small range with another Bluetooth supported device (phone, computer, printer, headset, car kit, etc.).

For more information on Bluetooth, please refer to "**6.3 Connecting to Bluetooth devices**".



Downloaded from www.Manualslib.com manuals search engine

### 11.1.4 Tethering & portable hotspot

This function allows you to share your phone's mobile data connection via USB or as a portable Wi-Fi access point (Please refer to "**6.5 Sharing your phone's mobile data connection**").

### 11.1.5 VPN settings

A mobile virtual private network (mobile VPN or mVPN) provides mobile devices with access to network resources and software applications on their home network, when they connect via other wireless or wired networks. Mobile VPNs are used in environments where workers need to keep application sessions open at all times, throughout the working day, as the user connects via various wireless networks, encounters gaps in coverage, or suspend-and-resumes their devices to preserve battery life. A conventional VPN cannot survive such events because the network tunnel is disrupted, causing applications to disconnect, time out, fail, or even the computing device itself to crash.

For more information of VPN, please refer to "**6.6 Connecting to virtual private networks**".

### 11.1.6 Mobile networks

**Data enabled**

If you do not need to transmit data on all mobile networks, unmark the check box of **Data enabled** to avoid incurring significant charges for data use on local carrier mobile networks, particularly if you do not have a mobile data agreement.

**Data roaming**

If you don't need to transmit data on other carriers' mobile networks, unmark the check box of **Data roaming** to avoid incurring significant roaming charges.

**Network Mode**

Touch to select network mode.



**Access Point Names**

You can select your preferred network with this menu.

**Use only 2G networks**

You can select to use only 2G networks.

**Network operators**

You can select a network operator.

**Cell broadcast/Cell broadcast settings**

Enable receipt of CB messages by marking the check box of Cell broadcast.

You can access a series of adjustable CB settings by touching **Cell broadcast settings**.

## 11.2 Call settings

Use Call settings to configure normal phone call settings and other special features offered by your carrier. You can also use Call settings to configure the phone so that it can place outgoing calls only to a fixed set of phone numbers.

### 11.2.1 Fixed Dialling Numbers

Fixed Dialling Number (FDN) is a service mode of SIM, where outgoing calls are restricted to a set of phone numbers. These numbers are added to the FDN list. The most common practical application of FDN is for parents to restrict the phone numbers to which their children can dial.

For security reasons, you'll be prompted to enable FDN by entering SIM PIN2 which is usually acquired from your service provider or SIM maker.



Downloaded from www.Manualslib.com manuals search engine

### 11.2.2 Voicemail

**Voicemail service**

Opens a dialog where you can select your carrier's voicemail service or another service.

**Voicemail settings**

If you are using your carrier's voicemail service, this opens a dialog where you can enter the phone number to use for listening to and managing your voicemail. You can enter a comma (,) to insert a pause into the number—for example, to add a password after the phone number.

### 11.2.3 Other call settings

**Call forwarding**

Depending on your subscription. Forward the incoming calls to a different number.

**Additional settings**

- **Caller ID:** Touch to set whether display the caller ID in outgoing calls.
- **Call waiting:** Touch to turn on/off call waiting. When turn on, during a call, there is a notification of incoming calls.

## 11.3 Sound

Use the Sound settings to configure many aspects of call and notification ringtones, music, and other audio settings.



- **Silent mode** Mark the check box to silence all sounds except media & alarms.
- **Alert override** Mark the check box to enable maximum volume and vibrate when device is in a pocket or bag.
- **Phone vibrate** Touch to access phone vibrate options.
- **Volume** Touch to set volume for Incoming call, Media and Alarm.
- **Phone ringtone** Touch to set your default incoming call ringtone.
- **Notification ringtone** Touch to set your default notification ringtone.
- **Audible touch tones** Mark the check box to enable playing tones when using dial pad.
- **Audible selection** Mark the check box to enable playing sounds when making screen selection.
- **Screen lock sounds** Mark the check box to enable playing sounds when locking and unlocking the screen.
- **Haptic feedback** Mark the check box to activate vibration when pressing soft keys and on certain UI interactions.



Downloaded from www.Manualslib.com manuals search engine

## 11.4 Display

- **Brightness** Touch to adjust the brightness of the screen or select Automatic brightness.
- **Auto-rotate screen** Touch to select whether rotate screen automatically.
- **Animation** Touch to select whether to show some, all or no animations.
- **Screen timeout** Touch to set screen timeout.

## 11.5 Location & security

Use the Location & Security settings to set your preferences for using and sharing your location when you search for information and use location-aware applications, such as Google Maps. You can also configure settings that help secure your phone and its data.

### 11.5.1 My Location

**Use wireless networks**

Mark the check box to use information from Wi-Fi and mobile networks to determine your approximate location, for use in Google Maps, when you search, and so on. When you select this option, you're asked whether you consent to share your location anonymously with Google's location service.

**Use GPS satellites**

Check to use your phone's global positioning system (GPS) satellite receiver to pinpoint your location within an accuracy as close as several meters ("street level"). The process of accessing the GPS satellite and setting your phone's precise location for the first time will require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location.



**AGPS Setting**

Touch to set the AGPS server address and the port.

### 11.5.2 Screen unlock pattern/Set up screen lock

- **None** Touch to disable screen unlock security.
- **Pattern** Touch to draw pattern to unlock screen.
- **PIN** Touch to enter a numeric PIN to unlock screen.
- **Password** Touch to enter a password to unlock screen.

### 11.5.3 SIM card lock/Set up SIM card lock

Open a screen where you can configure the PIN required to use the phone, and where you can change the SIM PIN.

### 11.5.4 Passwords/Visible passwords

Mark the check box to show passwords as you type.

### 11.5.5 Device administration/Select device administrators

Touch to add or remove the device administrators.

### 11.5.6 Credential storage

**Use secure credentials**

Mark the check box to allow applications to access your phone's encrypted store of secure certificates, related passwords and other credentials. Credential storage is used to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the credential storage, this setting is dimmed.



Downloaded from www.Manualslib.com manuals search engine

**Install from SD card**

Touch to install encrypted certificates from the microSD card.

**Set password**

Touch to set or change a password for the credential storage (at least 8 characters).

**Clear storage**

Touch to clear credential storage of all contents and reset its password.

## 11.6 Applications

You use the Applications settings to view details about the applications installed on your phone, to manage their data and force them to stop, and to set whether you want to permit installation of applications that you obtain from web sites and emails.

**Unknown sources**

Mark the check box to permit installation of applications that you obtain from web sites, emails, or other locations other than Google Play Shop.

To protect your phone and personal data, download applications only from trusted sources, such as Google Play Shop.

**Battery use**

Touch to show the status of battery using.

**Storage use**

Touch to view storage use.



**Manage applications**

Touch to manage and remove installed applications.

**Running services**

Touch to open a list of services—applications or parts of applications that provide services to other applications, or that run even when their main applications aren't running. Examples include the Android onscreen keyboard and the small portion of Google Talk that always listens for incoming messages. Above each service, one or more gray bars show what processes the running service needs and how much memory they're using (how much memory you would recover if you stopped the service). Depending on the service, when you touch it in the list it either opens a dialog in which you can stop it or opens its Settings screen.

**Development**

The Development screen contains settings that are useful for developing Android applications. For full information, including documentation of the Android applications and development tools, see the Android developer web site (http://developer.android.com).

- **USB debugging:** mark the check box to permit debugging tools on a computer to communicate with your phone via a USB connection.
- **Stay awake:** mark the check box to prevent the screen from dimming and locking when the phone is connected to a charger or to a USB device that provides power. Don't use this setting with a static image on the phone for long periods of time, or the screen may be marked with that image.
- **Allow mock locations:** mark the check box to permit a development tool on a computer to control where the phone believes it is located, rather than using the phone's own internal tools for this purpose.



Downloaded from www.Manualslib.com manuals search engine

## 11.7 Accounts & sync

Use the Accounts & Sync settings to add, remove, and manage your Google and other supported accounts. You can also use these settings to control how and whether all applications send, receive, and synchronize data on their own schedules, and whether all applications can synchronize user data automatically.

Gmail, Google Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

### 11.7.1 General sync settings

**Background data**

Mark the check box to permit applications to synchronize data in the background, whether or not you are actively working in them. Unmarking this setting can save battery power and lowers (but does not eliminate) data use.

**Auto-sync**

Mark the check box to permit applications to synchronize data on their own schedule. If you unmark this setting, you must touch an account in the list on this screen, press the **Menu** key, and touch **Sync now** to synchronize data for that account.

Synchronizing data automatically is disabled if **Background data** is unchecked. In that case, the **Auto-sync** checkbox is dimmed.



### 11.7.2 Manage accounts

The rest of this screen lists the Google Accounts and other accounts you've added to the phone. If you touch an account in this screen, its account screen opens.

This screen contains different options, depending on the kind of account. For Google Accounts, it lists the kinds of data you can synchronize to the phone with checkboxes so you can turn synchronizing on and off for each kind. You can also press the **Menu** key and touch **Sync now** to synchronize data. Touch **Remove Account** to remove the account along with all its data (contacts, mails, settings, and so on).

## 11.8 Privacy

You use the Privacy settings to manage your personal information.

**Back up my data**

Mark the check box to back up your phone's settings and other application data to Google Servers, with your Google Account. If you replace your phone, the settings and data you've backed up are restored onto the new phone for the first time you sign in with your Google Account. If you mark this option, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you unmark this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

**Automatic restore**

Mark the check box to restore your backed up settings or other data when you reinstall an application.



Downloaded from www.Manualslib.com manuals search engine

**Factory data reset**

Erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

When you are unable to power on your phone, there is another way to perform a factory data reset by using hardware keys. Hold down **Volume up** key and press **Power key** at same time until the screen lights up.

WARNING! Doing a factory data reset will delete all of your personal data and settings stored on your phone.

## 11.9 SD card & phone storage

Use the microSD card & Phone Storage settings to monitor the total and available space on your phone and on your microSD card; to manage your microSD card; and if necessary, to reset the phone, erasing all of your personal information.

### 11.9.1 SD card

**Total space/Available space**

Lists the amount of space on any microSD card installed in your phone and the amount you can use to store photos, videos, music, and other files.

**Unmount/Mount SD card**

Unmounts the microSD card from your phone so that you can format the card or safely remove it when the phone is on. This setting is dimmed if there is no microSD card installed, or have already unmounted it, or have mounted it on your computer.



**Erase SD card**

Permanently erases everything on a microSD card and prepares it for use with your phone.

### 11.9.2 Internal phone storage

**Available space**

Touch to display the amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), permanent and temporary data.

If a warning message comes up saying that phone memory is limited, you are required to free up space by deleting some unwanted applications, downloaded files, etc.

## 11.10 Language & keyboard

Use the Language & keyboard settings to select the language for the text on your phone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

### 11.10.1 Select locale

Touch to select the language and the region you want.

### 11.10.2 User dictionary

Touch to open a list of the words you've added to the dictionary. Touch a word to edit or delete it. Press the **Menu** key and touch **Add** to add a word.



Downloaded from www.Manualslib.com manuals search engine

### 11.10.3 Android keyboard

For phones with physical keyboards, unmark to disable the onscreen keyboard.

The Android keyboard settings apply to the onscreen keyboard that is included with your phone. The correction and capitalization features affect only the English version of the keyboard. Available options are as follows:

**Vibrate on keypress**

Mark the check box to have the phone vibrate briefly each time you touch a key on the onscreen keyboard.

**Popup on keypress**

Mark the check box to popup messages when you input keyboard.

**Sound on keypress**

Mark the check box to play a brief sound each time you touch a key on the onscreen keyboard.

**Touch to correct words**

Mark the check box to enable you to correct entered words by touching them.

**Auto-capitalisation**

Mark the check box to have the onscreen keyboard automatically capitalize the first letter of the first word after a period, the first word in a text field, and each word in name fields.

**Show settings key**

Touch to set how to show the settings key.

**Voice input**

Touch to display or not the Mic button on keyboard.



**Input languages**

Touch to set input language.

**Quick fixes**

Correct commonly typed mistakes.

**Show suggestions**

Display suggested words while typing.

**Auto-complete**

Spacebar and punctuation automatically insert highlighted word.

### 11.10.4 Swype

To set the options of Swype input method.

**Select Input Method**

Touch to select the input method between Android keyboard and Swype.

**How to Swype**

Touch to view how to use the Swype.

**Personal dictionary**

Touch to open a list of the words you've added to the dictionary. Touch a word to edit or delete it. Press the **Menu** key and touch **Add** to add a word.

**Preferences**

View and modify Swype options.

**Language options**

Touch to set the active languages.



Downloaded from www.Manualslib.com manuals search engine

## 11.11 Voice input & output

### 11.11.1 Voice recogniser settings

Touch to set Google voice recognition items:

- **Language** Choose an input language
- **SafeSearch** Set Google Search safety range
- **Block offensive words** Mark the check box to hide recognized offensive voice results

### 11.11.2 Text-to-speech settings [1]

You use the Text-to-Speech settings to configure the Android text-to-speech synthesizer, for applications like TalkBack that can take advantage of it.

If you don't have speech synthesizer data installed, only the Install voice data setting is available.

**Listen to an example**

Touch to play a brief sample of the speech synthesizer, using your current settings.

**Always use my settings**

Mark the check box to use the settings on this screen in place of speech synthesizer settings available in other applications.

**Default Engine**

Touch to set the speech synthesis engine to be used for spoken text.

[1] Availability dependent on the country you're based in.



**Install voice data**

If your phone does not have speech synthesizer data installed, connect to Google Play Shop and find yourself guided through the process of downloading and installing the data. This setting is not available if the data is already installed.

**Speech rate**

Touch to open a dialog where you can select how quickly you want the synthesizer to speak.

**Language**

Touch to open a dialog where you can select the language of the text you want the synthesizer to read. This is particularly useful in combination with Always Use My Settings, to ensure that text is spoken correctly in a variety of applications.

## 11.12 Accessibility [1]

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

**Accessibility**

Mark the check box to enable all installed accessibility plug-ins.

**KickBack**

Mark the check box to have the phone vibrate briefly as feedback as you navigate the user interface, press buttons, and so on.

**TalkBack**

Mark the check box to have an installed speech synthesizer speak the labels or names of items as you navigate the phone's user interface.

[1] Availability dependent on the country you're based in.



Downloaded from www.Manualslib.com manuals search engine

**SoundBack**

Mark the check box to play a sound as you navigate to the phone's user interface.

**Power button ends call**

Mark the check box to end a call by pressing **Power** key during the call.

## 11.13 Date & time

Use Date & Time settings to customise your preferences for how date and time are displayed.

**Automatic**

Mark the check box to use network-provided values. Or unmark to set all values manually.

**Set date**

Touch to open a dialog where you can manually set the phone's date.

**Select time zone**

Touch to open a dialog where you can set the phone's time zone.

**Set time**

Opens a dialog where you can set the phone's time.

**Use 24-hour format**

Mark the check box to display the time using 24-hour clock format.

**Select date format**

Touch to open a dialog where you can select the format for displaying dates.



## 11.14 About phone

Actually this contains information about a lot of things ranging from Legal information, Model number, Firmware version, Baseband version, Kernel version, Build number to those listed below:

**System updates**

Touch to check for system updates.

**Status**

This contains the status of the Battery charging level, My phone number, Network, Signal strength, Mobile network type, Service state, Roaming, Mobile network state, IMEI, IMEI SV, Wi-Fi MAC address, Bluetooth address, Up time.

**Battery use**

Touch to open a list of the applications and operating system components you have used since you last connected the phone to a power source, sorted by the amount of power they have used. Touch an application in the list to view details about its power use and, if available, touch a button to open a settings or information screen for that component or application.

**Legal information**

Touch to view legal information.



Downloaded from www.Manualslib.com manuals search engine

# 12 Making the most of your phone

## 12.1 FOTA Upgrade

Using FOTA Upgrade tool you can update your phone's software.

To access **Firmware Upgrade Manager**, please touch **Menu** key, then press **Settings/About phone/System updates**. Touch **Check for updates**, and the phone will search for the latest software. If you want to update the system, please touch the button **Download**, after it done please touch **Install** to complete the upgrade. Now your phone's software will have the latest version.

Press **Settings and Help**, and you can set **Wi-Fi Only**, **Auto-check interval**, **Reminder** and **Help**.

If you have chosen auto-check, when the system discovers the new version, the icon will appear in the status bar. Touch the notification to access the **Firmware Upgrade Manager** directly.



# 13 Product Safety Information

**Pictograms and Graphic Symbols**

Read the Safety Information section of this user guide on page 121

Do not use while re-fuelling

Do not use hand-held while driving

This device may produce a bright or flashing light

For body-worn operation maintain a separation of 1.5 cm

Do not dispose of in a fire

Small parts may cause a choking hazard

Avoid contact with magnetic media

This device may produce a loud sound

Avoid extreme temperatures

Keep away from pacemakers and other personal medical devices

Avoid contact with liquid, keep dry

Switch off when instructed in hospitals and medical facilities

Do not try to disassemble

Switch off when instructed in aircraft and airports

Do not rely on this device for emergency communications

Switch off in explosive environments

Only use approved accessories



Downloaded from www.Manualslib.com manuals search engine

## Product Safety Information

## RF Exposure

### General Statement on RF energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

### Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to ensure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.952 W/kg(1). As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

### Body worn operation

Important safety information regarding radiofrequency radiation (RF) exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 1.5 cm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

### Limiting exposure to radio frequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page http://www.who.int/peh-emf WHO Fact sheet 193: June 2000.

(1) The tests are carried out in accordance with IEC standard PT62209-1.



## Regulatory information

The following approvals and notices apply in specific regions as noted.

TCT Mobile

**TCT Mobile Europe SAS**
55 Avenue des Champs Pierreux,
Immeuble Le Capitole 92000 Nanterre, France
+33 1 46 52 61 00

**EC declaration of conformity / Déclaration de conformité CE**

Product / Produit WiFi and FM radio Portatif: HSDPA/UMTS dual band / GSM quad bands handheld station with bluetooth technology, HSDPA/UMTS bibande / GSM quadribandes avec technologie Bluetooth, Wifi et radio FM

Product identification / *Identification du produit :*
Vodafone Smart II type Alcatel V860

*We / Nous*: TCT Mobile Europe SAS
55, avenue des Champs Pierreux
92000 Nanterre
France

Declare under our sole responsibility that the product above mentioned is conform to the applicable essential requirements of the directive 1999/5/EC and that all essential radio test suites have been carried out. Conformity assessment procedure : annex IV of the directive. / *déclarons sous notre entière responsabilité que le produit ci-dessus est en conformité avec les exigences essentielles applicables de la directive 1999/5/CE et que toutes les séries d'essais radio essentielles ont été effectuées. Procédure d'évaluation de conformité : annexe IV de la directive.*

Applied standards / *Normes appliquées :*

- Item 3.1.a ( protection of the health and of the safety of the user ) / *Article 3.1.a ( protection de la santé et de la sécurité de l'utilisateur)*
  - EN 60950-1:2006/A11:2009
  - EN 62209-1 (2006)
  - EN 62209-2 (2010)
  - EN 50 360 (2006), Council recommendation 1999/519/EC (July 99 )
  - EN 50332-1(2000)
  - EN 50332-2(2003)
- Item 3.1.b ( protection requirements with respect to electromagnetic compatibility ) / Article 3.1.b ( exigences de protection en ce qui concerne la compatibilité électromagnétique )
  - EN 301 489-1 v.1.8.1 (2008-04), EN 301 489-3 v.1.4.1 (2002-08), EN 301 489-7 v.1.3.1 (2005-11) , EN 301 489-17 v.2.1.1 (2009-05), EN 301 489-24 v.1.5.1 (2010-10)
- Item 3.2 ( effective use of spectrum so as to avoid harmful interferences ) / *Article 3.2 ( utilisation efficace du spectre radioélectrique de façon à éviter les interférences dommageables)*
  - EN 301 511 v.9.0.2 (2003-03), EN 301 908-1 v.4.2.1 (2010-03), EN 301 908-2 v.4.2.1 (2010-03) , EN 300 328 v.1.7.1 (2006-10), EN 300 440-1 v.1.6.1 (2010-08), EN 300 440-2 v.1.4.1(2010-08)

- This product also conforms to the applicable requirements of the directive 2004/108/EC (electromagnetic compatibility). / *Ce produit est en conformité avec la directive 2004/108/EC (comptabilité électromagnétique)*
  - EN 55013:2001 +A2:2006
  - EN 55020:2007

- This product can connect with a Common Mobile Phone Charger which complies with below standards: (Ce produit peut être utilisé avec un chargeur universel pour téléphone portable conforme aux standards suivants :)
  - EN301 489-34 v.1.1.1 (2010-10)
  - EN 62684:2010

Conformity of this product has been reviewed by the following Notified body. / *La conformité de ce produit a été vérifiée par l'organisme de certification (notify body) suivant.*

American Certification Body, Inc.
Suite C110, Whittier Avenue 6731, 22101 McLean, Virginia, United States
Identification number: 1588

CE 1588

Date :2012-04-10
Signature

TCT Mobile Europe SAS
Immeuble Le Capitole
55, avenue des Champs Pierreux
92000 Nanterre - FRANCE
RCS Nanterre 440 038 222

Christophe Benoit
TCT Mobile Europe SAS / Deputy General Manager, EMEA

TCT Mobile Europe SAS - Siège social : 55 Avenue des Champs Pierreux, Immeuble Le Capitole 92000 Nanterre France SAS au capital de 23 031 072 euros - RCS Nanterre B 440 038 222 - Siret 440 038 222 000 38 APE 4652Z

TCT Mobile Europe SAS - Siège social : 55 Avenue des Champs Pierreux, Immeuble Le Capitole 92000 Nanterre France SAS au capital de 23 031 072 euros - RCS Nanterre B 440 038 222 - Siret 440 038 222 000 38 APE 4652Z



Downloaded from www.Manualslib.com manuals search engine

## Distraction

**Driving**
Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

**Operating machinery**
Full attention must be given to operating machinery in order to reduce the risk of an accident.

## Product Handling

**General Statement on handling and use**
You alone are responsible for how you use your phone and any consequences of its use.
You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum -10 and maximum +50 degrees Celsius.
- Please check local regulations for disposal of electronic products.

Do not carry your phone in your back pocket as it could break when you sit down.

**Small Children**
Do not leave your phone and its accessories within the reach of small children or allow them to play with it.
They could hurt themselves or others, or could accidentally damage the phone.
Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.



**Demagnetisation**
To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a prolonged time.

**Electrostatic discharge (ESD)**
Do not touch the SIM card's metal connectors.

**Antenna**
Do not touch the antenna unnecessarily.

**Normal use position**
When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.

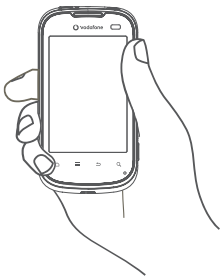

**Air Bags**
Do not place a phone in the area over an air bag or in the air bag deployment area.
Store the phone safely before driving your vehicle.

**Seizures/Blackouts**
This phone is capable of producing bright flashing lights.

**Repetitive Motion Injuries**
To minimise the risk of RSI, when texting or playing games with your phone:

- Do not grip the phone too tightly
- Press the buttons lightly
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text
- Take lots of breaks to stretch and relax

**Emergency Calls**
This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

**Loud Noise**
This phone is capable of producing loud noises which may damage your hearing. Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Use the recommended headphones only.

**Bright Light**
This phone is capable of producing flashes of light, do not use it too close to the eyes.

**Phone Heating**
Your phone may become warm during charging and during normal use.



Downloaded from www.Manualslib.com manuals search engine

## Electrical Safety

**Accessories**
Use only approved accessories.
Do not connect with incompatible products or accessories.
Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

**Connection to a Car**
Seek professional advice when connecting a phone interface to the vehicle's electrical system.

**Faulty and Damaged Products**
Do not attempt to disassemble the phone or its accessories.
Only qualified personnel must service or repair the phone or its accessories.
If your phone or its accessories have been submerged in water, punctured, or subjected to a severe fall, do not use them until you have taken it to be checked at an authorised service centre.

**Battery Handling & Safety**
Always switch the device off and disconnect the charger before removing the battery.
Only use the battery and charger supplied, or manufacturer approved replacements intended for use with your phone. Using other batteries and chargers could be dangerous.
Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery.
Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it, take it to a service centre for testing.

## Interference

**General statement on interference**
Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

**Pacemakers**
Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.



**Hearing Aids**
People with hearing aids or other cochlear implants may experience interference noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

**Medical devices**
Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

**Hospitals**
Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

**Aircraft**
Switch off your wireless device whenever you are instructed to do so by airport or airline staff.
Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

**Interference in cars**
Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

## Explosive environments

**Petrol stations and explosive atmospheres**
In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.
Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.



Downloaded from www.Manualslib.com manuals search engine

**Blasting Caps and Areas**

Turn off your mobile phone or wireless device when in a blasting area or in areas posted with notifications requesting "two-way radios" or "electronic devices" are turned off to avoid interfering with blasting operations.

Your telephone is a transceiver that operates on GSM in quad-band (850/900/1800/1900MHz) or UMTS in dual-band (900/2100MHz).

CE 1588 !

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website:

http://www.vodafone.com/smart2

| This equipment may be operated in: | | | | AT | BE |
|---|---|---|---|---|---|
| CY | CZ | DK | EE | FI | FR |
| DE | GR | HU | IE | IT | LV |
| LT | LU | MT | NL | PL | PT |
| SK | SI | ES | SE | GB | IS |
| LI | NO | CH | BG | RO | TR |

## Protection against theft [1]

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

[1] Contact your network operator for service availability.



## Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

**In European Union countries:**

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

**In non European Union jurisdictions:**

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.



Downloaded from www.Manualslib.com manuals search engine

# 14 Telephone warranty

**WARRANTY TERMS AND CONDITIONS**

1. Vodafone undertakes the warranty of this Mobile Phone for a period of two (2) years from the date of Purchase by the original owner (not transferable) under normal use.
2. The Battery has a limited warranty for twelve (12) months, and Charger for twenty-four (24) months against manufacturing defects. Other accessories have a limited warranty for twenty-four (24) months against manufacturing defects.
3. This Warranty does not cover damage resulting from;
   a) Normal wear & tear of the equipment;
   b) Defects and damages due to the equipment being used other than its normal and customary manner;
   c) An unauthorized disassembly, repair, alteration or modification being carried out;
   d) Misuse, abuse, negligence or accident howsoever caused;
   e) Defects or damage arising from improper testing, operation, maintenance, installation, or any alteration or modification;
   f) Defects or damage due to spillage of food or liquids, corrosion, rust or the use of wrong voltage;
   g) Scratches or damage to plastic surfaces and all other externally exposed parts that are due to normal customer use;
4. The Handset requiring service/repair must be delivered at the user's cost.
5. This warranty will be null and void in any of the following events:
   a) If the serial number or warranty seal on the equipment has been defaced or removed.
   b) If any term contained in this warranty has been altered or modified in any way without prior written consent of Vodafone.
6. The limited warranty extends only to customer who purchase the product in one of the countries (or areas) set forth at the end of this document. The limited warranty is only valid in Vodafone's intended country (or area) of sale of the Product.



7. If the product is returned to Vodafone after the expiration of the warranty period, Vodafone's normal service policies shall apply and the Consumer will be charged accordingly.
   a) Vodafone neither assumes for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.
   b) All warranty information, product features and specifications are subject to change without notice.
8. THIS WARRANTY IS IN LIEU OF ANY AND OTHER WARRANTIES EXPRESSED OR IMPLIED, SPECIFICALLY INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. VODAFONE ASSUMES NO LIABILITY FOR THE BREACH OF THE WARRANTY BEYOND CORRECTING THE BREACH IN THE MANNER DESCRIBED ABOVE. IN NO EVENT SHALL VODAFONE BE LIABLE FOR CONSEQUENCES.



Downloaded from www.Manualslib.com manuals search engine

# 15 Accessories [1]

The latest generation of Vodafone GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.

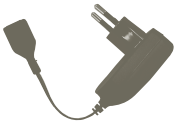

Standard charger

UK charger

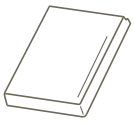

Battery



USB cable

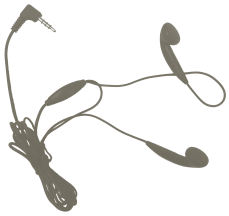

Stereo headset

microSD card

Only use your telephone with the batteries, chargers and accessories in your box.

[1] Pictures for reference only.



# 16 Troubleshooting

**Q1. Why does my alarm not work?**

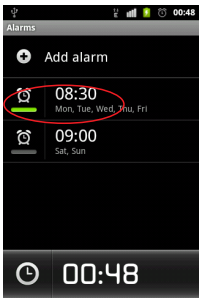


Firstly, please be noted that the alarm does not work in power off mode.

Secondly, please remember to check the bar under the icon is green after you finish editing your alarm. If the bar under the Icon is not green, means the alarm is not activated. When the bar under the icon is green, the alarm is activated successfully.

**Q2. Why couldn't I see the SD card on PC?**

1. Please make sure your SD card is undamaged and can be recognized by your handset.
2. Please make sure the correct USB cable for Vodafone Smart II is used.
3. When you connect the handset to PC, you'll get the notification of **USB connected**. Please press **Turn on USB storage**, and then you can access your SD card on PC.

Downloaded from www.Manualslib.com manuals search engine

**Q3. How can I install applications such as tools and games?**

APK (Android Package) file is the installation file for Android phone, which can be downloaded from Google Play Shop or other websites. Please copy APK files to the SD card and use the built-in File Manager program to open it, then follow the setup wizard to finish the installation.

Please note that the third-party APK files, downloaded from other websites than Google Play Shop, are not allowed to be installed by default due to security reason. You can change the setting by the following the procedures: **Settings->Applications**, then activate **Unknown sources** option.

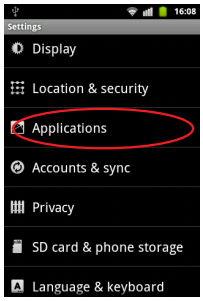


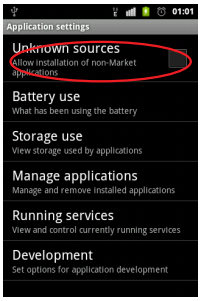


**Q4. How can I uninstall the applications?**

The built-in applications in the handset are not allowed to be uninstalled. You can only uninstall the applications installed by yourself.

Please press **Menu** key at home screen-**>Settings>Applications>Manage applications>Downloaded**, then you can see the applications installed by yourself. Please click the one that you want to uninstall and follow the uninstall process.



**Q5. How can I connect to Wi-Fi?**

Please press **Menu** key at home screen -> **Settings** -> **Wireless & networks** -> Turn on **Wi-Fi** -> Press **Wi-Fi settings** -> Select **Network notification** -> press **Menu** key -> **Scan** -> The available Wi-Fi networks will be listed.

Press the network which you want to connect. If the connection is successful, the Wi-Fi icon will be shown on the top of the status bar, near the antenna signal icon.

Please be noted that the Wi-Fi function could fail if static IP is activated. You can deactivate **Use static IP** by pressing **Menu** key at home screen -> **Settings** -> **Wireless & networks** -> Turn on **Wi-Fi** -> Press **Wi-Fi settings** -> press **Menu** key -> **Advanced** ->deactivate **Use static IP**.

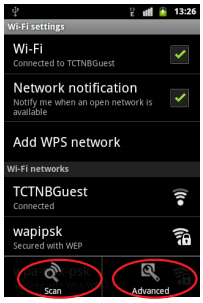


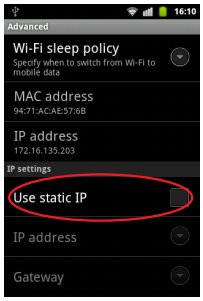


**Q6. Handset cannot power on or power on with strange behavior, such as can not charge, charge abnormally, unlock the screen when you forget the screen unlock pattern, and etc ...**

You can initiate a master reboot to the handset following steps as described:

Power off the handset; long press **Volume Up** key + **Power On** in power off mode at the same time for a few seconds until you see the reset interface. After reset you can use mobile normally.

Please note that user data format will erase all data from your phone (not include SD card files and current system software).



Downloaded from www.Manualslib.com manuals search engine

**Q7. Why is there a notification of connection error or certificates error when I use mail or social network applications?**

If the time or time zone is not correctly set, the phone might have connection error or certificates error when you use the above applications. Please set your handset's time to the correct local time including time zone, date and time.

**Q8. How can I transfer my call to another party?**

When you are in a call, you can transfer the call to another party by use add call. Dial the number that you wish to transfer the call.

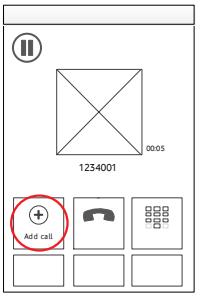


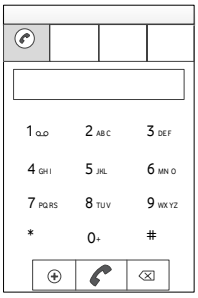


Please press "Home" key to go back the home screen. Then pressed make a call key to add call.

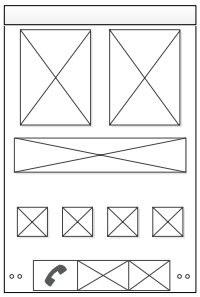

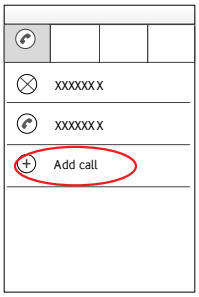




Dial "4" and press sending key.

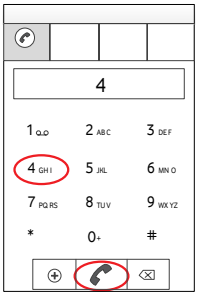




Downloaded from www.Manualslib.com manuals search engine

# 17 Specifications

| | |
|---|---|
| **Processor** | Broadcom® 21552™ |
| **Platform** | Android™ 2.3 |
| **Memory** | ROM: 512 MB<br>RAM: 512 MB |
| **Dimensions (LxWxT)** | 109×58×12.35 mm |
| **Weight** | Around 144 grams with battery |
| **Display** | 3.2-inch TFT-LCD touchscreen with 320×480 HVGA resolution |
| **Network** | UMTS:<br>Dual-band 900/2100 MHz<br>GSM/GPRS/EDGE:<br>Quad-band 850/900/1800/1900 MHz<br>(Band frequency and data speed are operator dependent.) |
| **GPS** | Assisted GPS/Internal GPS antenna |
| **Connectivity** | • Bluetooth® V3.0+EDR<br>• Wi-Fi®: IEEE 802.11 b/g/n<br>• 3.5 mm audio jack<br>• Micro-USB |
| **Camera** | 3.2 megapixel color camera |



| | |
|---|---|
| **Audio supported formats** | AAC, AAC+, AAC Enhanced, WB AMR, MP3, Midi |
| **Video supported formats** | H.263, H.264, MPEG4 |
| **Battery** | • Rechargeable Lithium-ion battery<br>• Capacity: 1150 mAh |
| **Expansion Slot** | microSD™ memory card<br>(Availability of microSD card depends on market) |
| **Special Features** | • G-sensor<br>• E-Compass<br>• Light and proximity sensor |

**Note** Specifications are subject to change without prior notice.

| |
|---|
| CJA6050VDAAA |



Downloaded from www.Manualslib.com manuals search engine